



## Vanity Unit

# TAPLANES INSTALLATION INSTRUCTIONS TO BE USED AS A PRIMARY GUIDE.


CONSULT ALL OTHER MANUFACTURERS' GUIDES  
AFTER READING AND UNDERSTANDING TAPLANES  
REQUIREMENTS.

**TAPLANES LIMITED**  
Station Court  
Nidd  
Harrogate  
North Yorkshire  
HG3 3BG

**ENQUIRIES**  
📞 01423 771 645  
✉️ [enquiries@taplanes.co.uk](mailto:enquiries@taplanes.co.uk)  
🌐 [www.taplanes.co.uk](http://www.taplanes.co.uk)

## Vanity as Delivered to Site



- Vanity carcass (usually X2 but may also be a single washbasin vanity or WC vanity - varies by unit design) Pre-fitted, not pre-plumbed.
- Composite vanity tops - pre-fitted
- Sanitaryware - supplied only
- Plumbing materials - supplied only
- Packers (where required) - pre-fitted
- Support-frame (where required) - pre-fitted

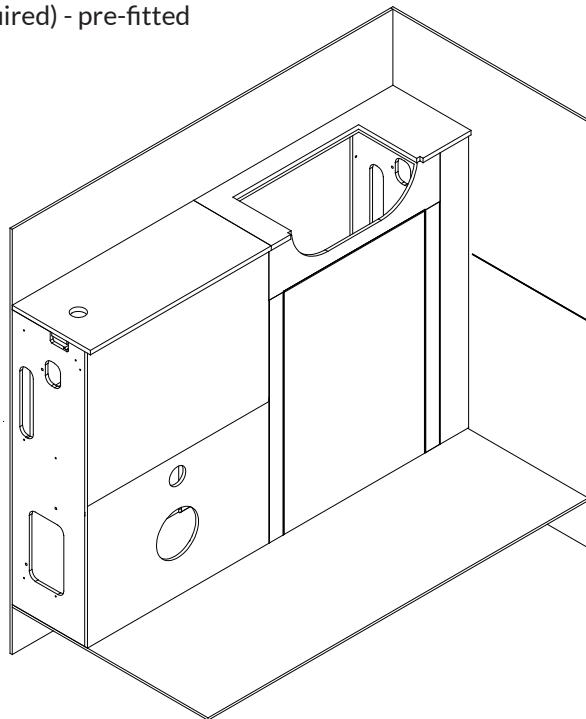**NOTE:**


Units with wall-hung WC Pans usually include a fixed frame. Do not remove the frame.

**NOTE:**

If washbasin vanity has a hinged door, do not remove the door at any point of the process.

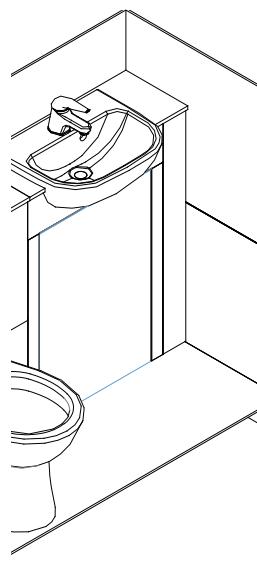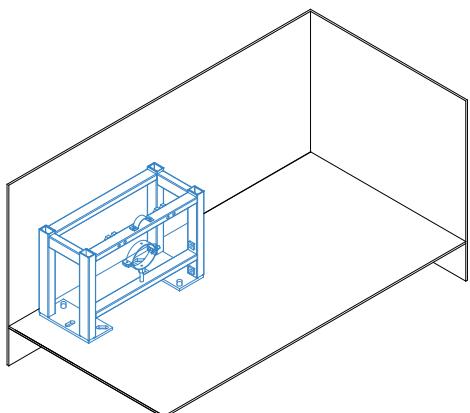


**FIXED PANEL**

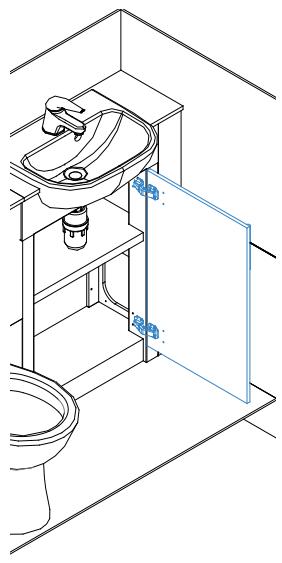

**HINGED DOOR**


## Vanity Dismantling Instructions

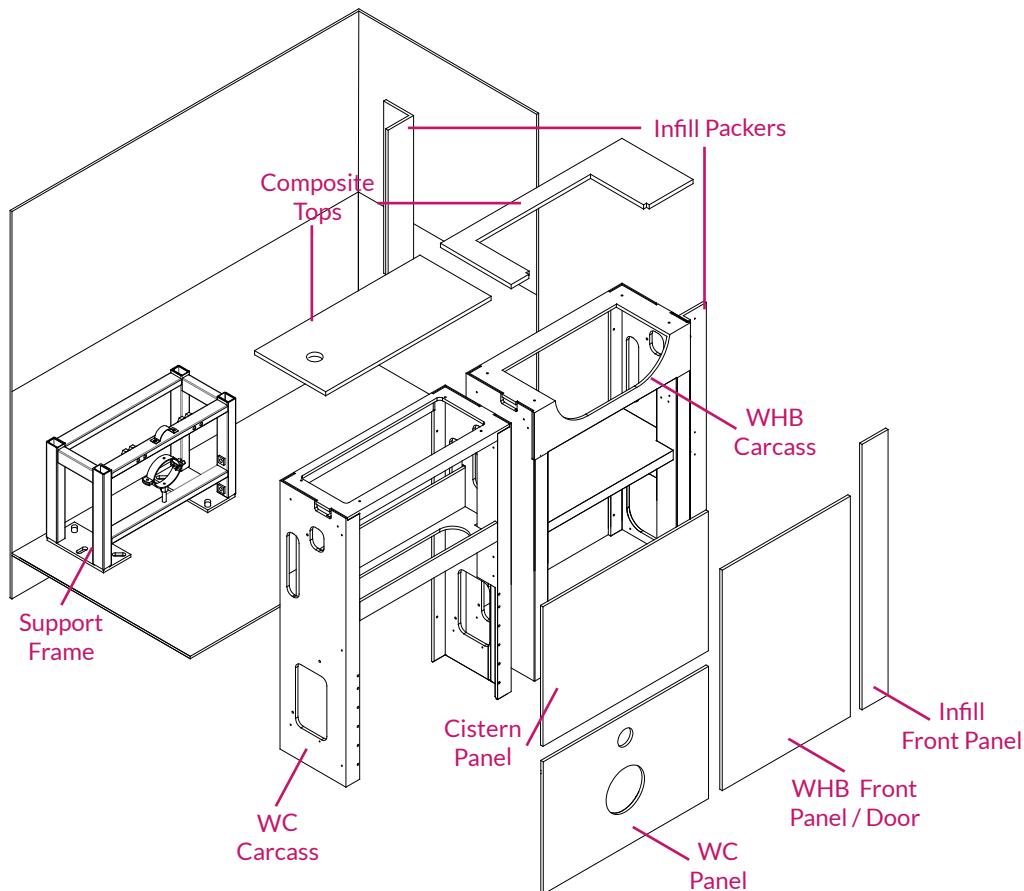



**NOTE:**

- Do not lose any removed screws.
- Do not mix vanity carcasses with different units.



1. Remove front panels using suction pads.

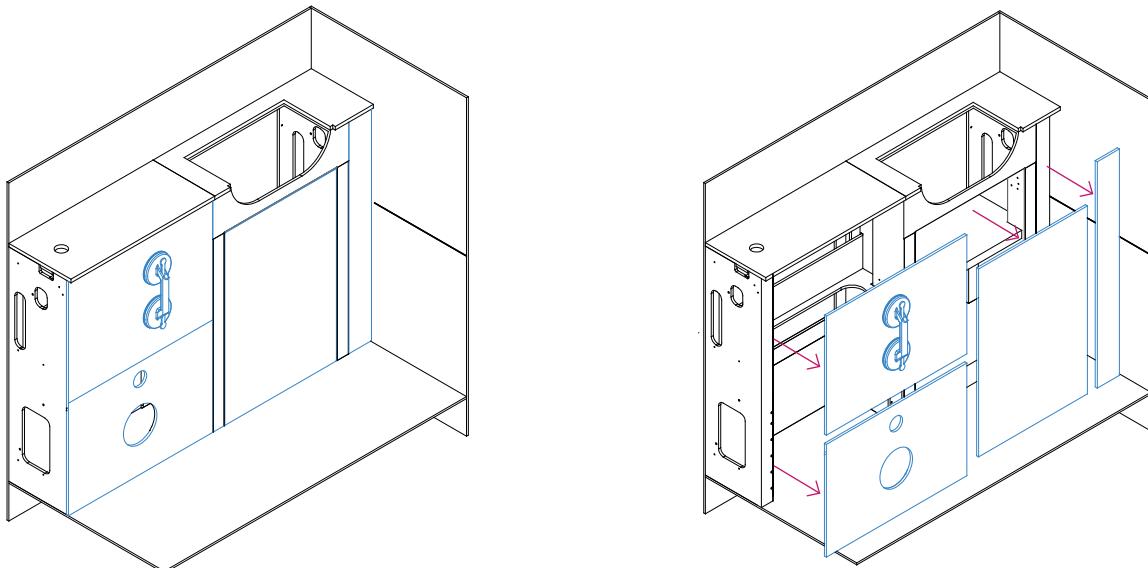



2. Remove composite tops by taking out screws from underneath.

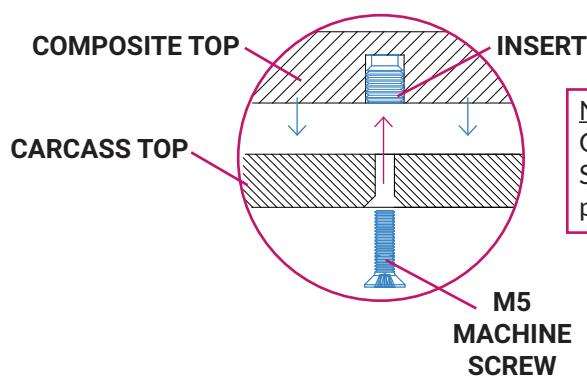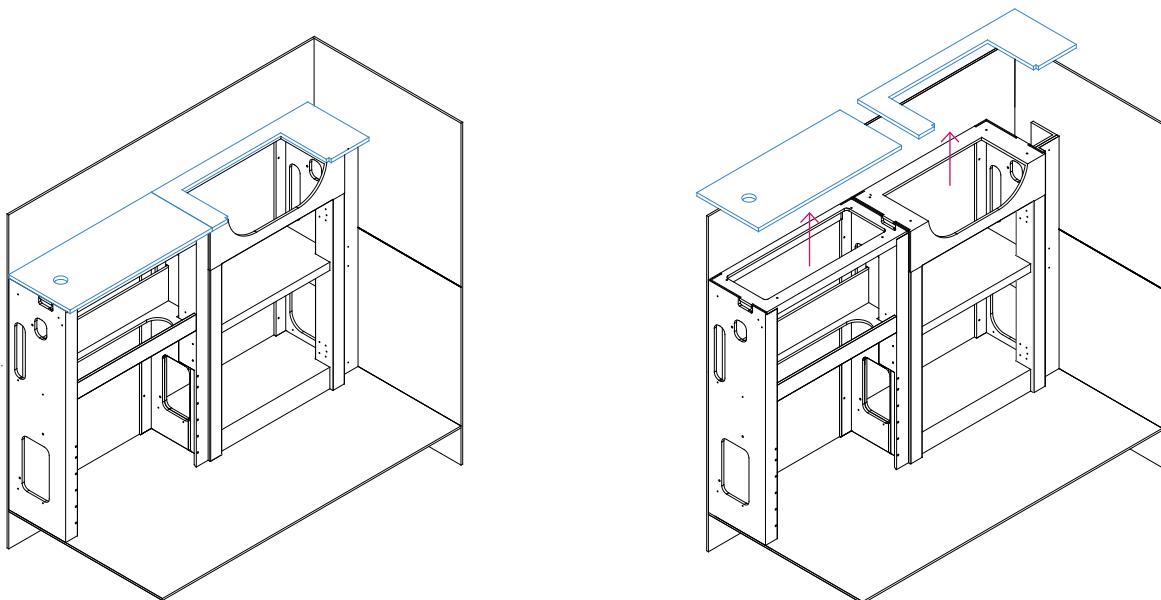



a.

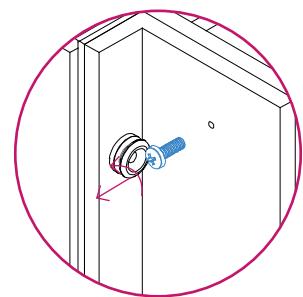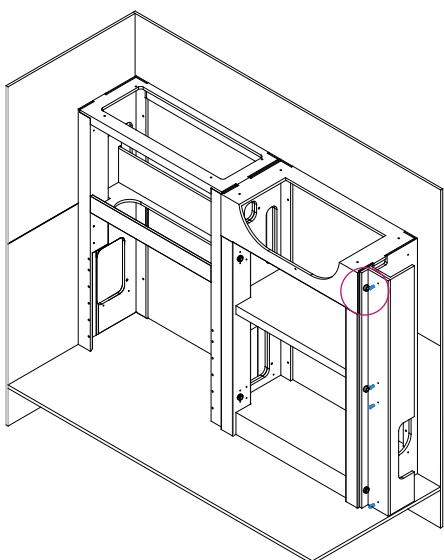





b.

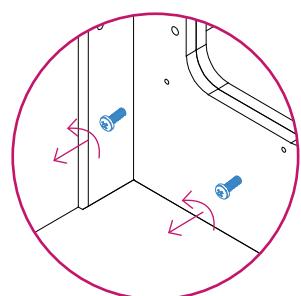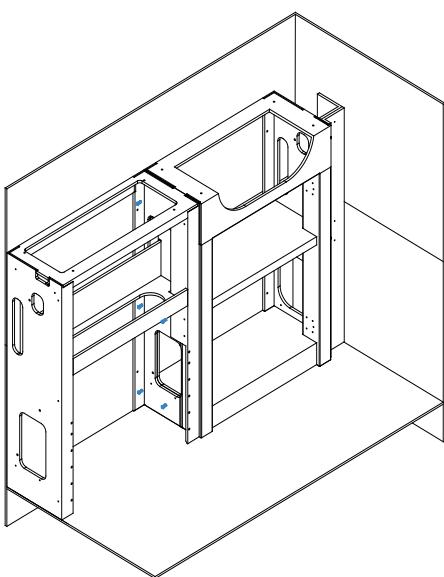



c.

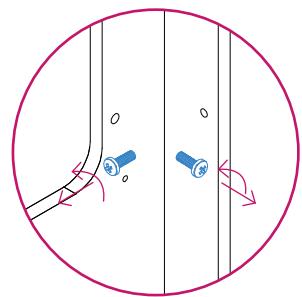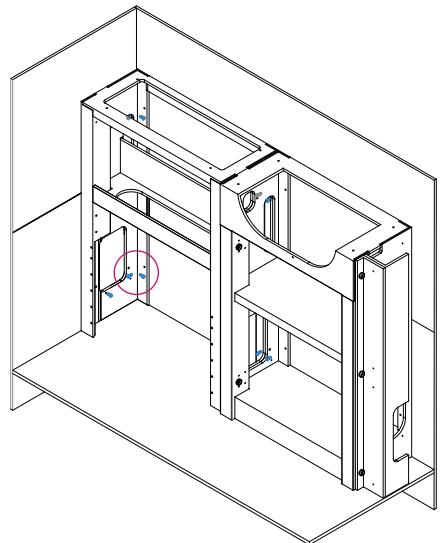


**4. Remove each carcass.**

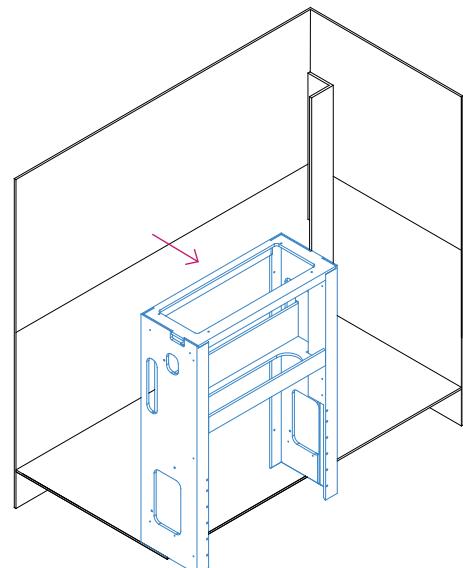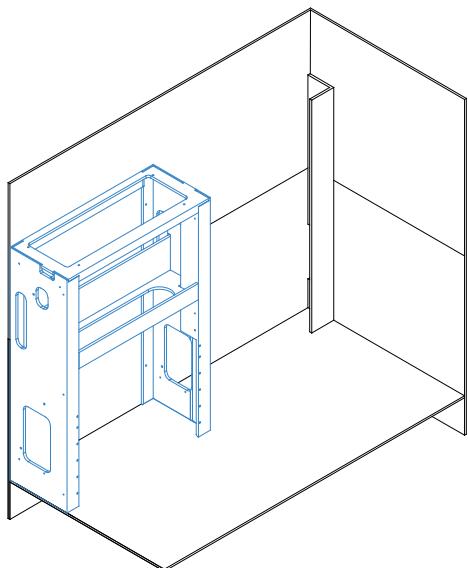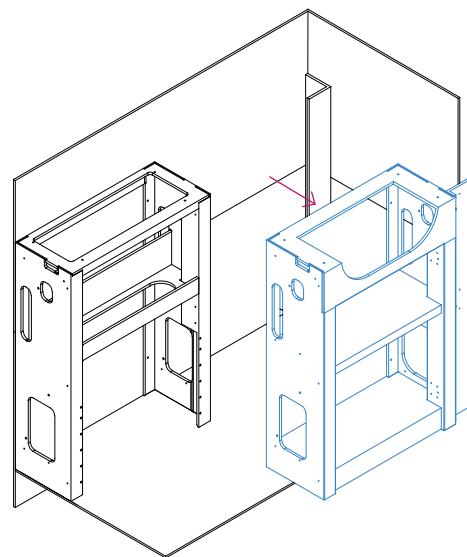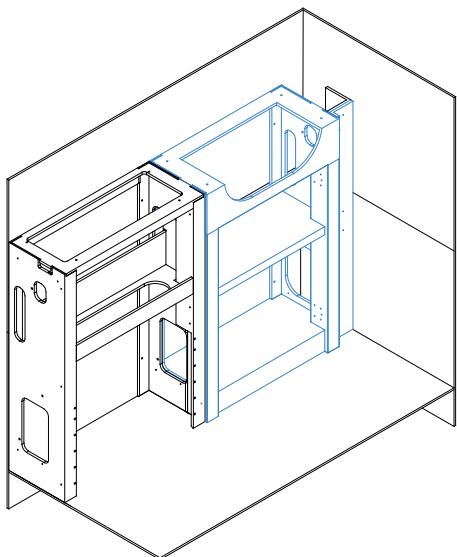

**5. Detach packer by removing screws joining the packer to the unit (if applicable).**

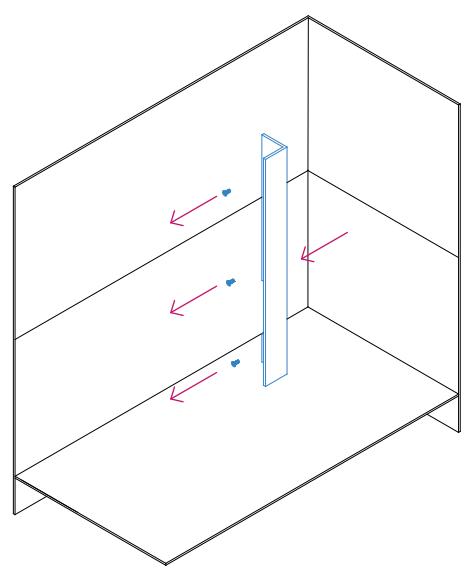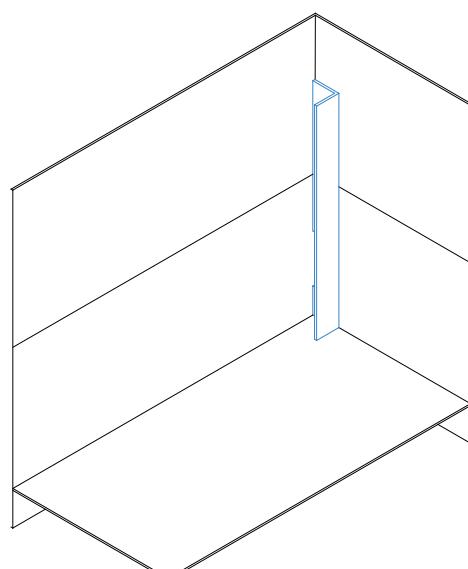


6. Sections can now be separated.

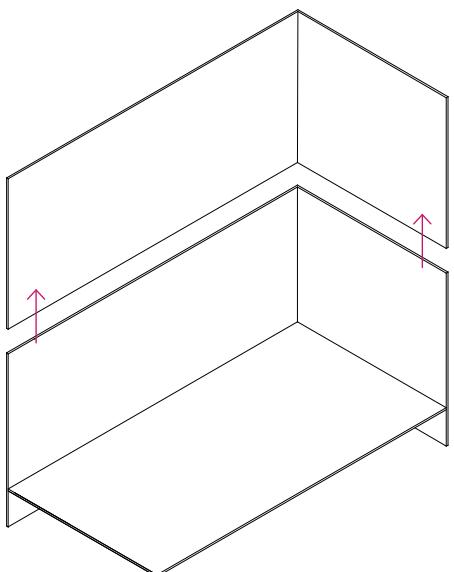


## Vanity Installation Instructions


1. Slide in first carcass.

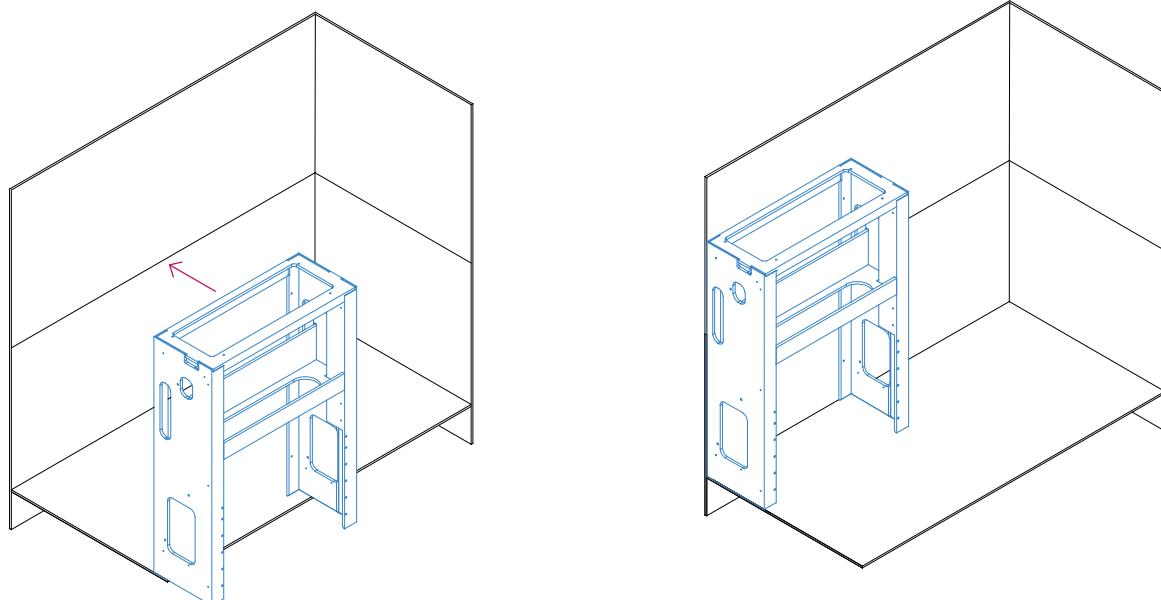


2. Use previously removed screws to fix packer (where applicable).

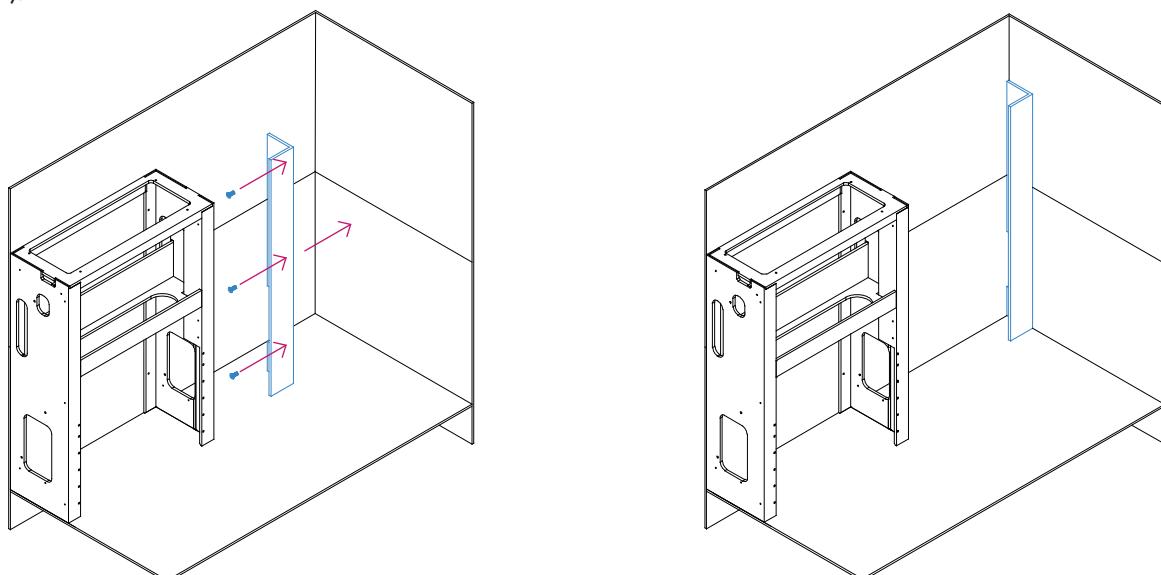


3. Slide in second carcass.

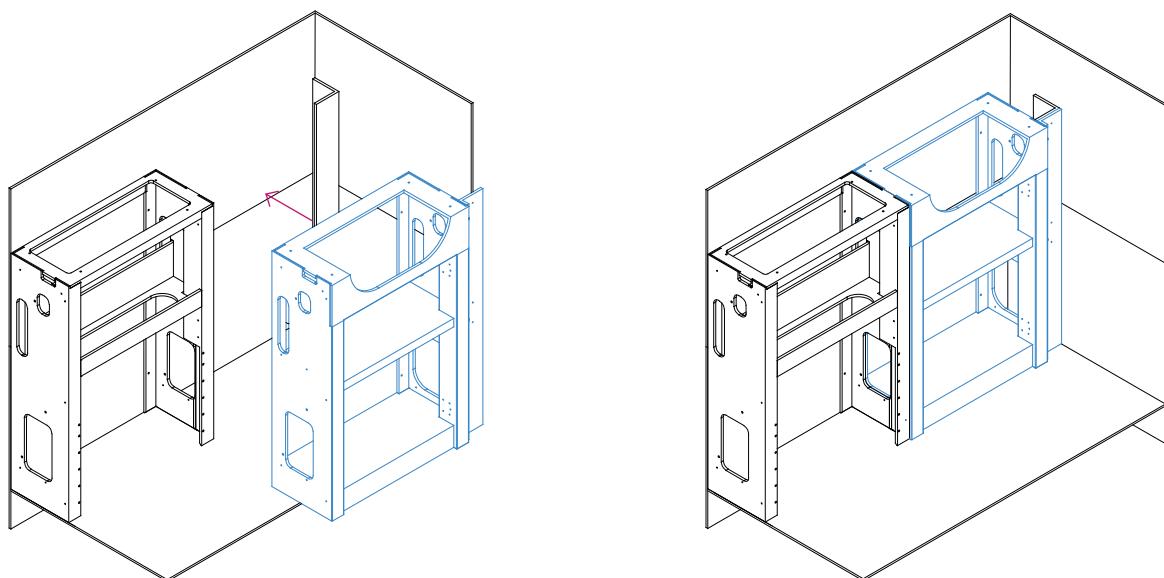



4. Use previously removed screws to attach the two carcasses together.

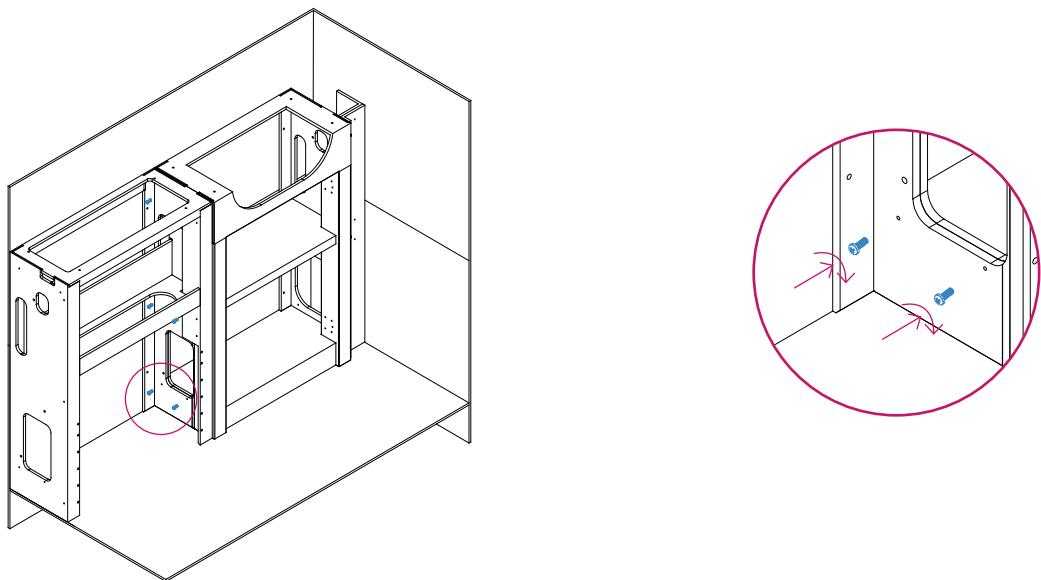






5. Use previously removed screws to first attach one side of the joined carcasses (a.) and then to attach them to the back (b.).

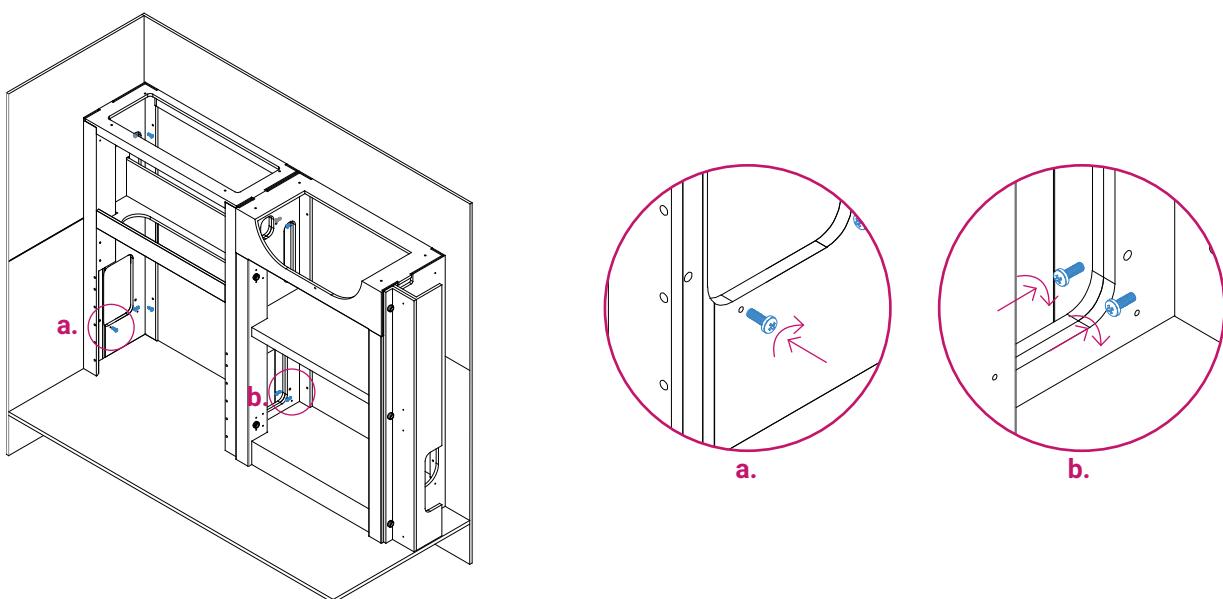


**6.** Use previously removed screws to fix the infill packers together (if applicable). If no infill packers, then fix second side of joined carcass directly to the wall.

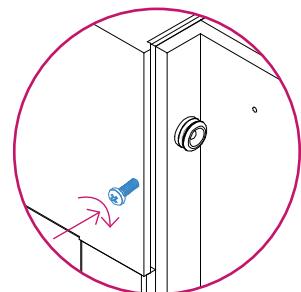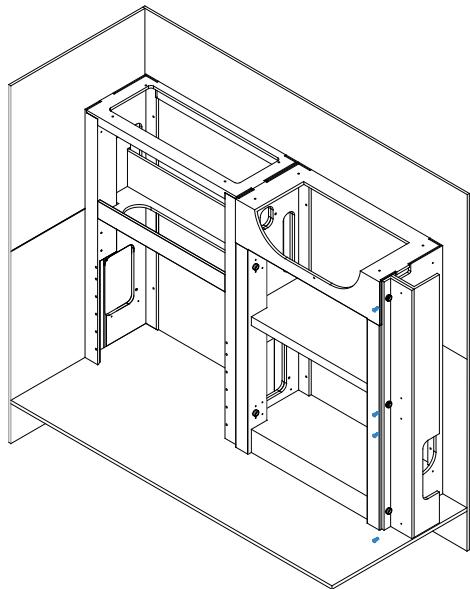


**7.** Clip the packer front panel in (if applicable).

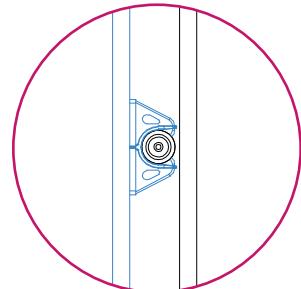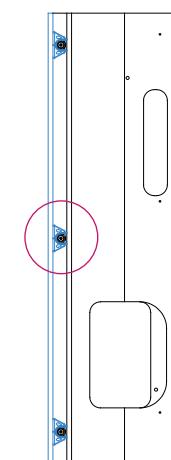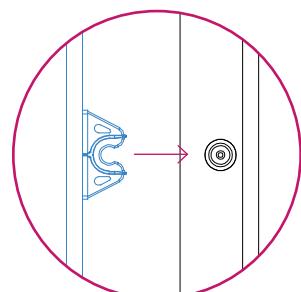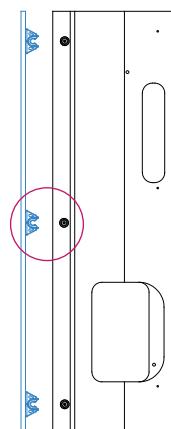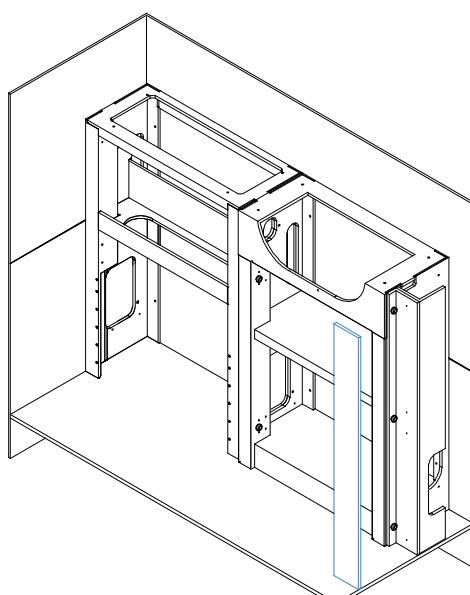


**8.** Use previously removed screws to fix composite vanity tops to the carcass.

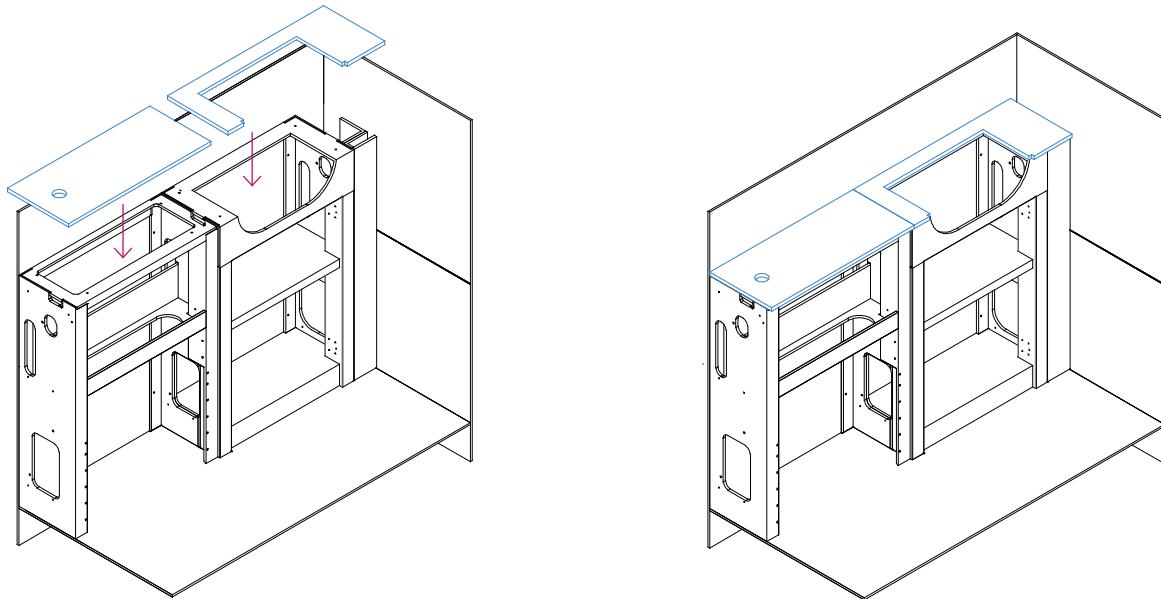




**9.** Fit and plumb washbasin. Refer to manufacturer's guide for detailed instructions.

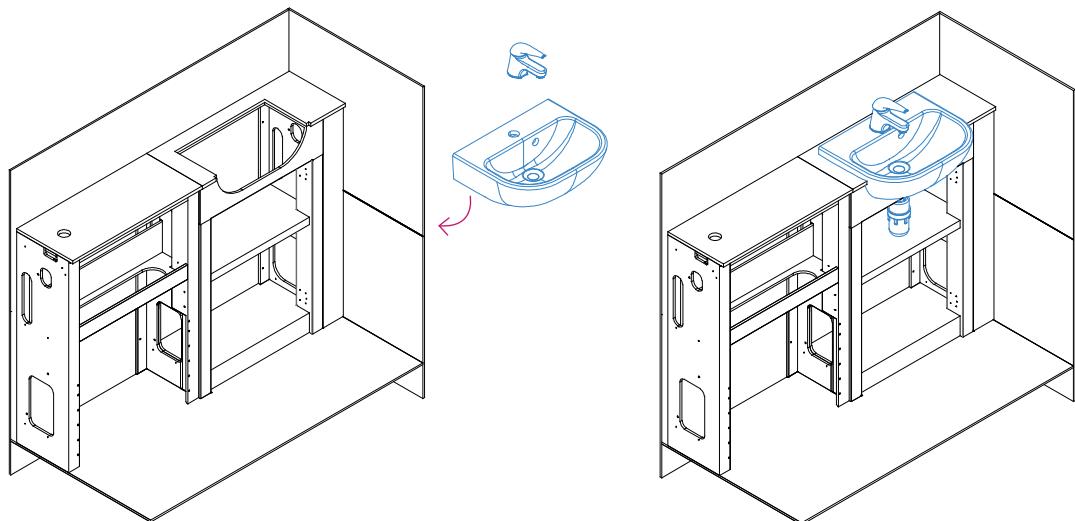




**10.** Fit the cistern. Refer to manufacturer's installation guide for detailed instructions.

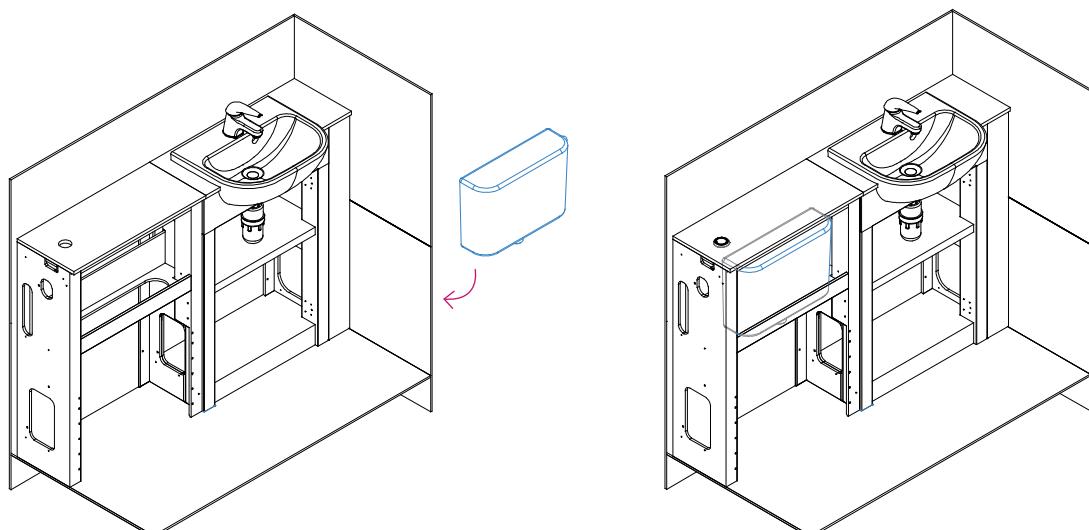



11. Be sure to use packing piece to lock cistern into position.

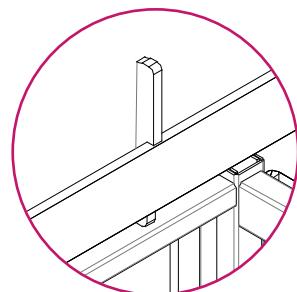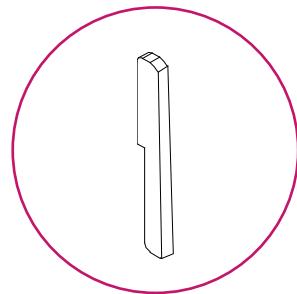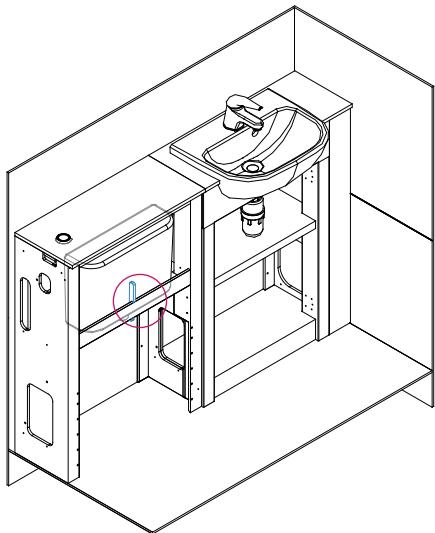


12. When a support-frame is used, use packer to fill the gap between frame and front panel.

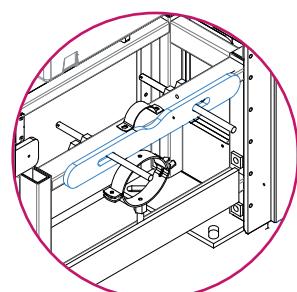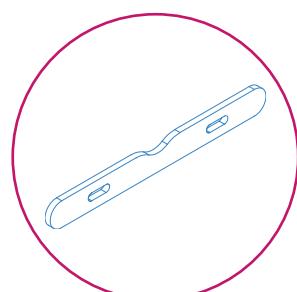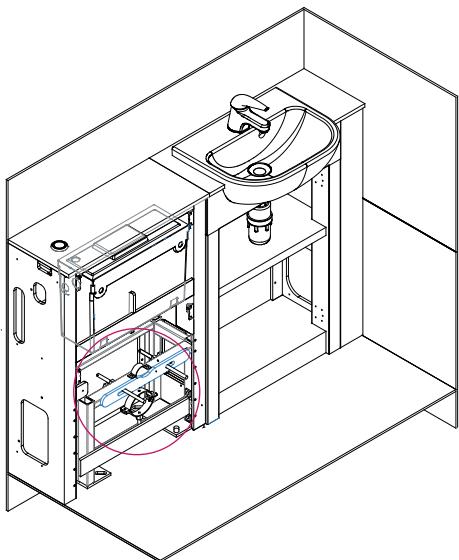


13. Clip WC front panel into position.

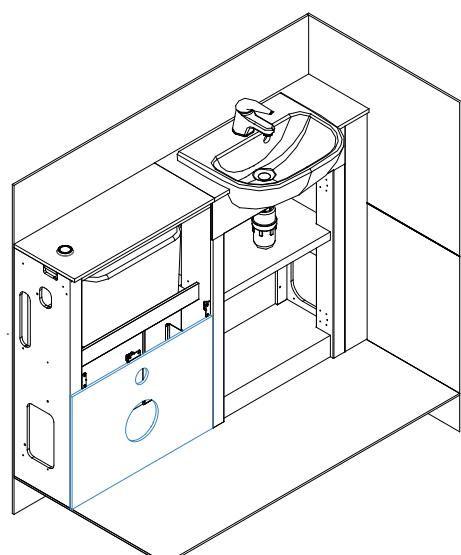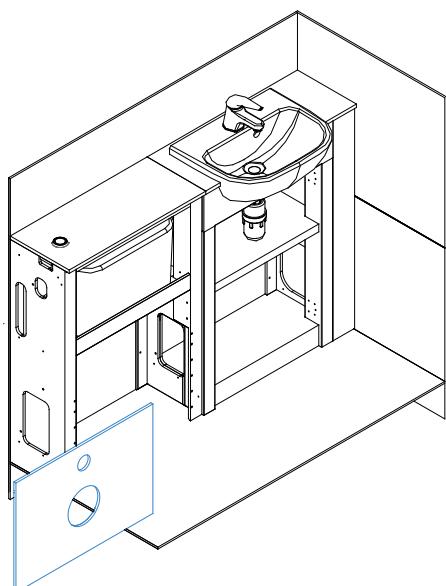

**14.** Plumb the WC. Refer to manufacturer's installation guides for detailed instructions.

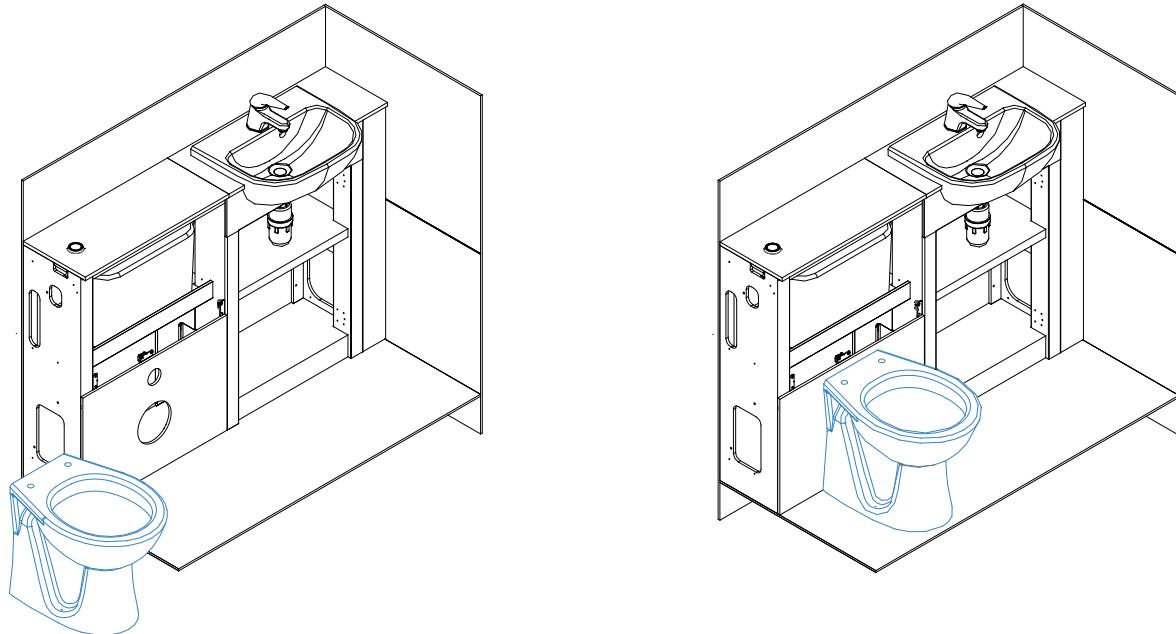

**15.** Clip in the remaining front panels.

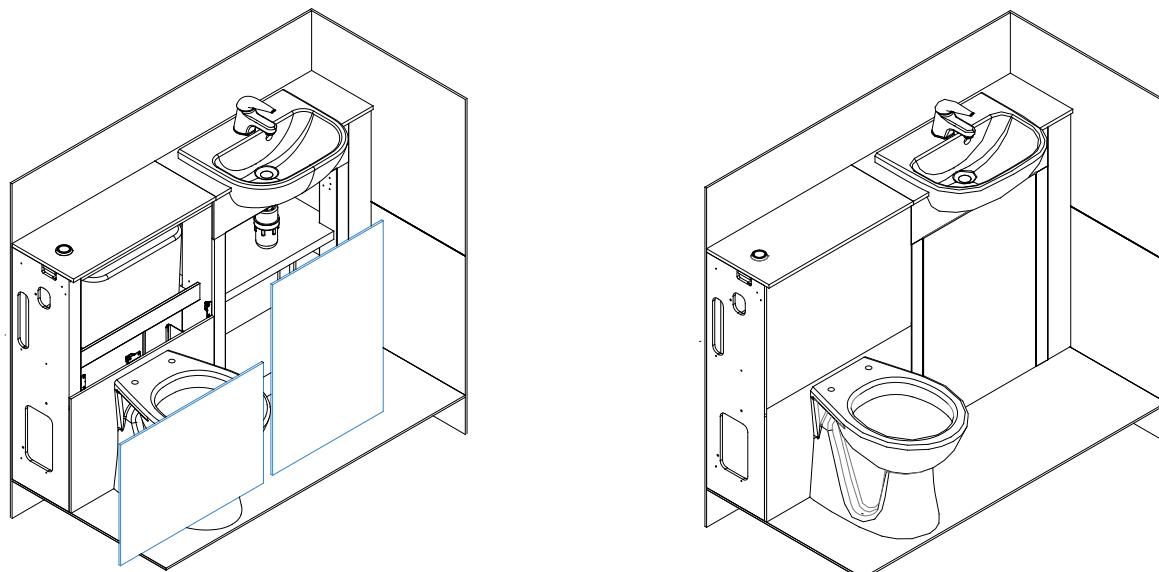

**TAPLANES LIMITED**  
Station Court  
Nidd  
Harrogate  
North Yorkshire  
HG3 3BG

**ENQUIRIES**  
01423 771 645  
[enquiries@taplanes.co.uk](mailto:enquiries@taplanes.co.uk)  
[www.taplanes.co.uk](http://www.taplanes.co.uk)