



## Shower & Changing Pod

# TAPLANES INSTALLATION INSTRUCTIONS TO BE USED AS A PRIMARY GUIDE.


CONSULT ALL OTHER MANUFACTURERS' GUIDES  
AFTER READING AND UNDERSTANDING TAPLANES  
REQUIREMENTS.

**TAPLANES LIMITED**  
Station Court  
Nidd  
Harrogate  
North Yorkshire  
HG3 3BG

**ENQUIRIES**  
📞 01423 771 645  
✉️ [enquiries@taplanes.co.uk](mailto:enquiries@taplanes.co.uk)  
🌐 [www.taplanes.co.uk](http://www.taplanes.co.uk)

### Shower & Changing Pod as Delivered to Site

- Assembled Minipod
- Electrical Appliances (LED Lights, PIR Sensor)\*
- Extraction\*
- Shower Valve and Fittings\*

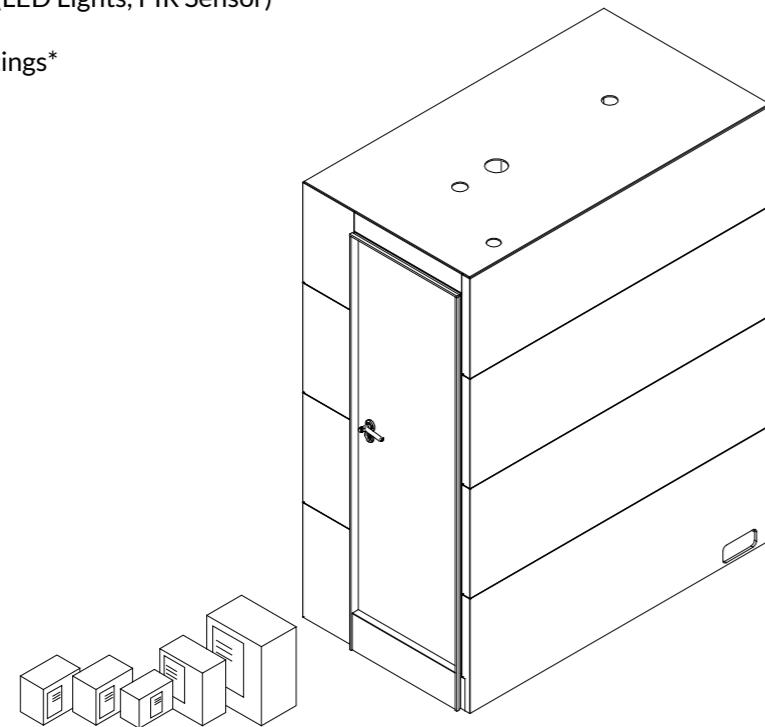


Unless stated otherwise, all parts are to be fitted on site by installers.


\*Optional, supply only accessories. Please refer to manufacturers' installation instructions.

#### HANDLING GUIDELINES:

- Units are heavy and should be handled by two people when dismantling and assembling.
- Dismantle at the time of delivery if needed for access.
- Extra caution to be taken to protect tongue and groove.

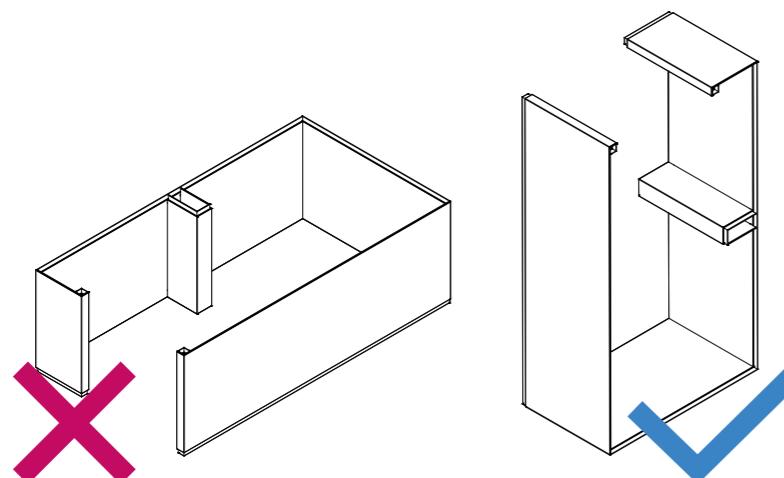

### Shower & Changing Pod Dismantling Instructions


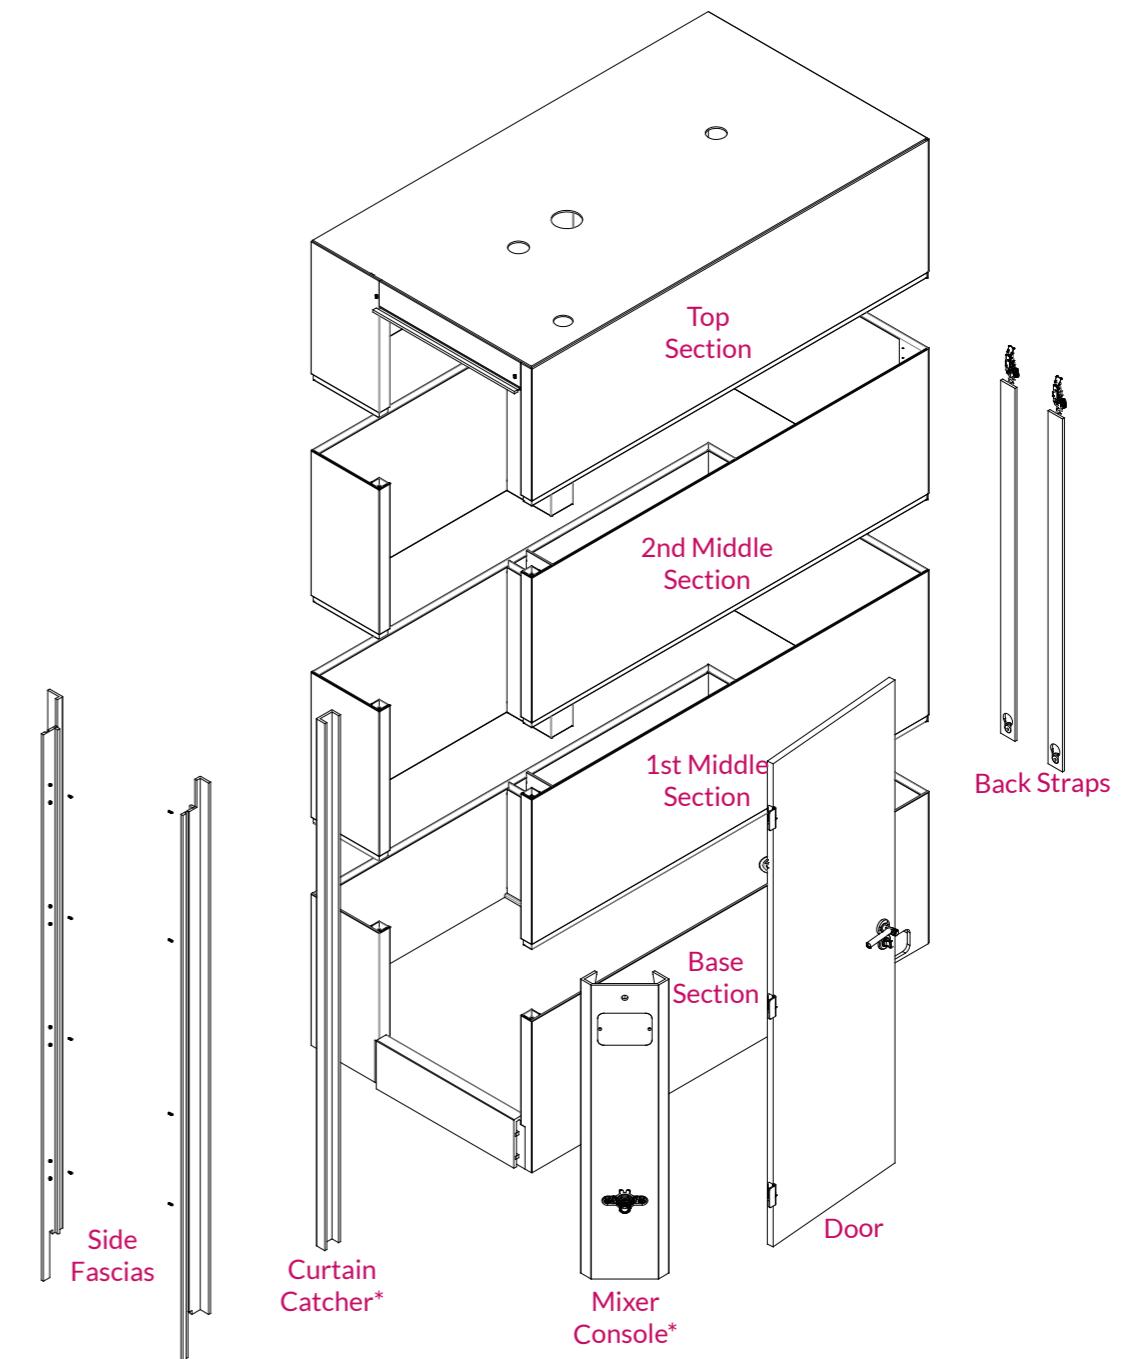


#### NOTE:



- Spare screws and cover caps are provided in an envelope.
- Take care not to lose any screws removed.
- Do not mix sections from different units.
- No. of sections may vary by design

\*Optional, supply only accessories. Please refer to manufacturer's installation instructions.



1. Remove backstraps and/or aluminium straps (if applicable).

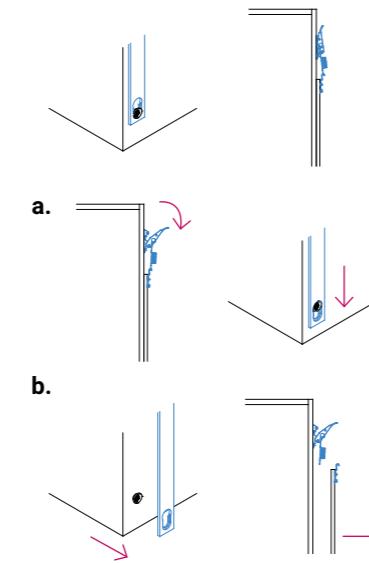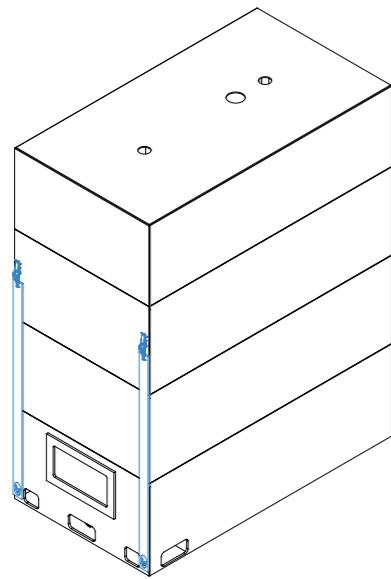

2. Take off door by removing screws connecting door hinges to side fascias.

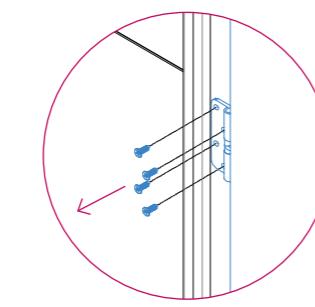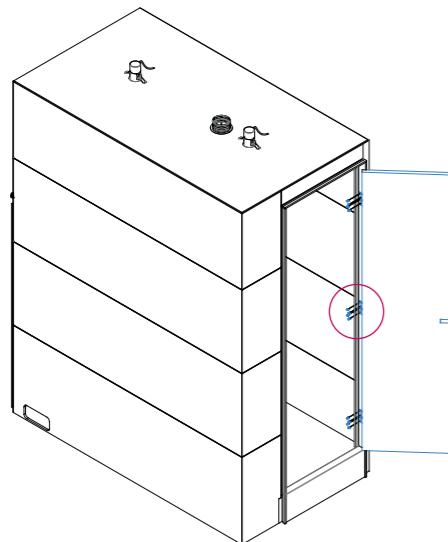


3. Take off side fascias by removing screws. Note the screws on top fascia must also be removed.


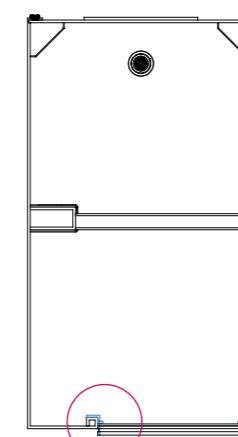
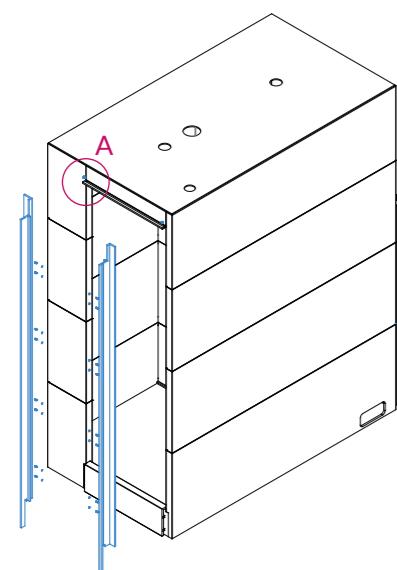


NOTE: Check if screw in diagram A is used on unit as it may not always be required.



4. Remove mixer console (if applicable). Refer to **Taplanes Mixer Console Installation Instructions** as a detailed guide.

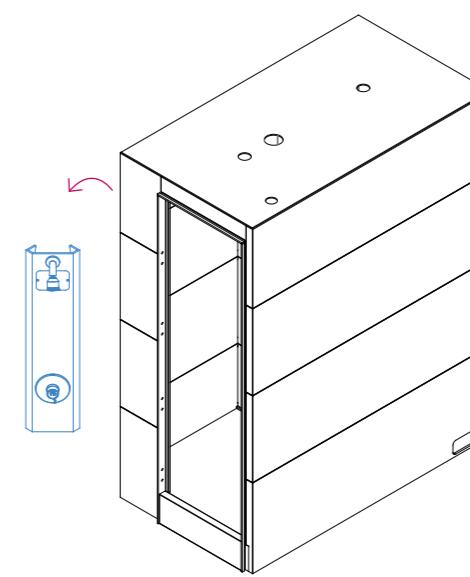


5. Remove curtain catcher (if applicable).

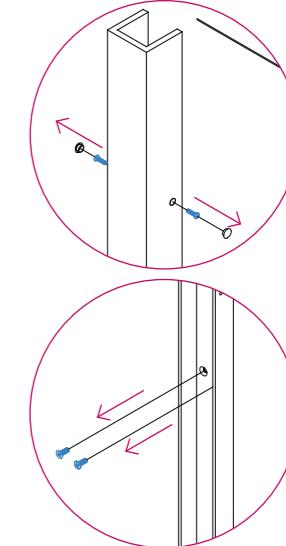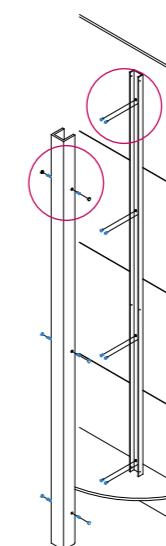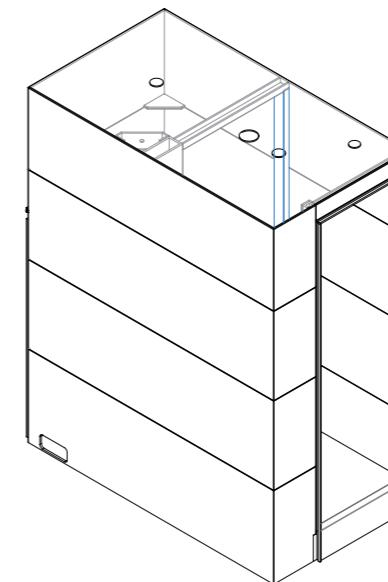

6. Separate soap dishes by removing cover caps and screws.

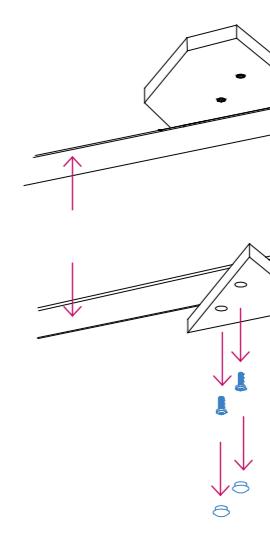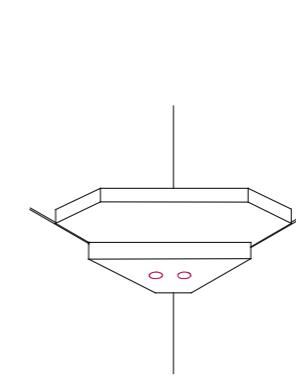


7. Lift sections in sequence from top to bottom.

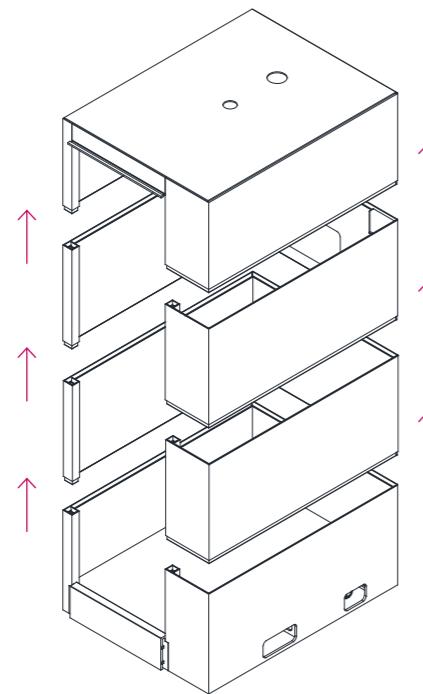


### Shower & Changing Pod Installation Instructions


1. Plumb base section and check for leaks.

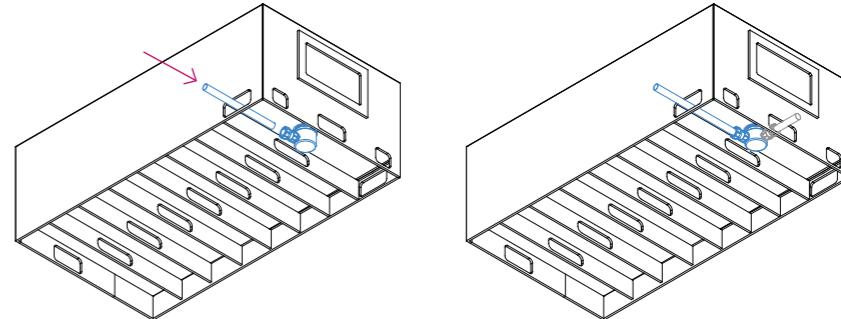


2. Position the base and check level (usually achieved with levelling compound or packers).

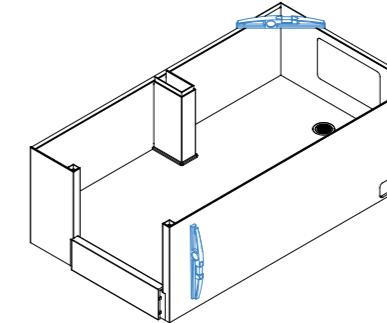


3. Slot in 1<sup>st</sup> middle section and secure with tapping tool and mallet.

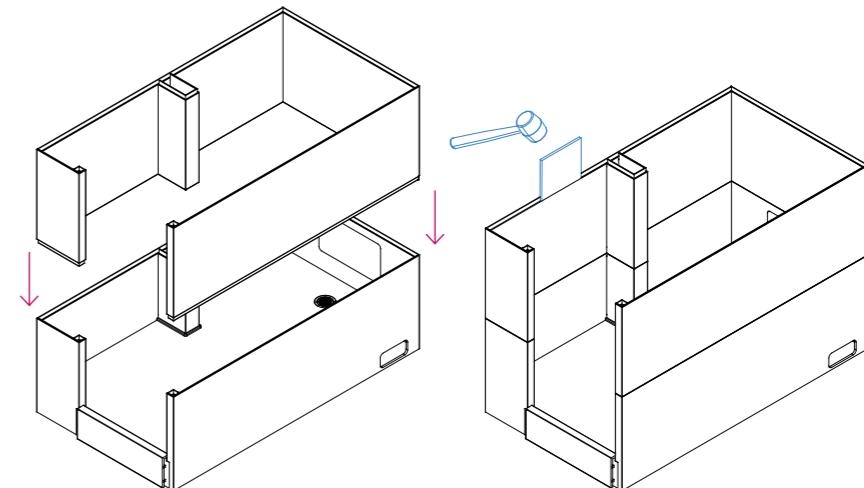


4. Slot in 2<sup>nd</sup> middle section and secure with tapping tool and mallet. Repeat with 3<sup>rd</sup> and 4<sup>th</sup> middle section (if applicable).

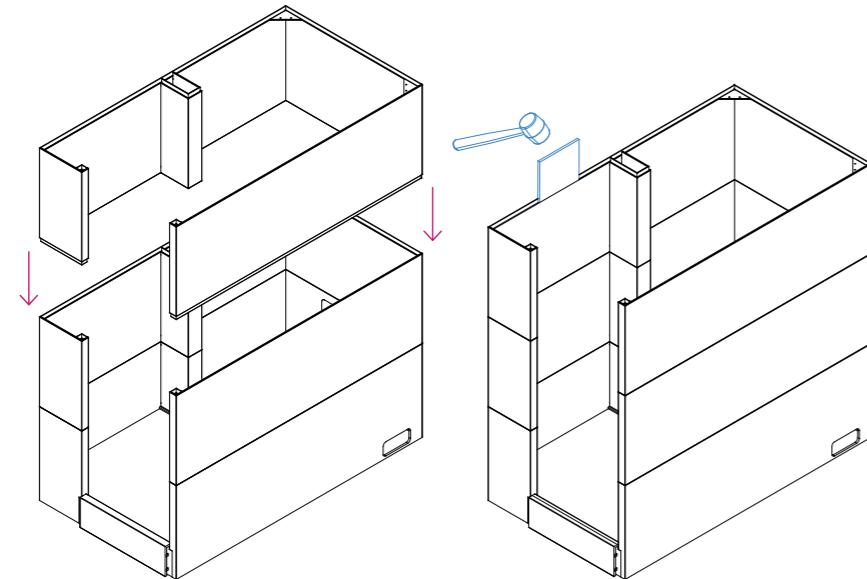


7. Secure top and last middle sections by joining soap dishes with screws and fit cover caps.

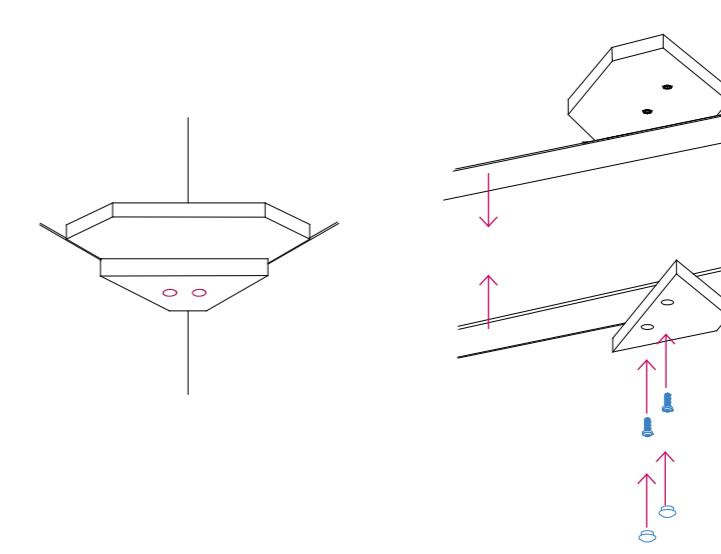


5. Attach 3/4 backstraps.

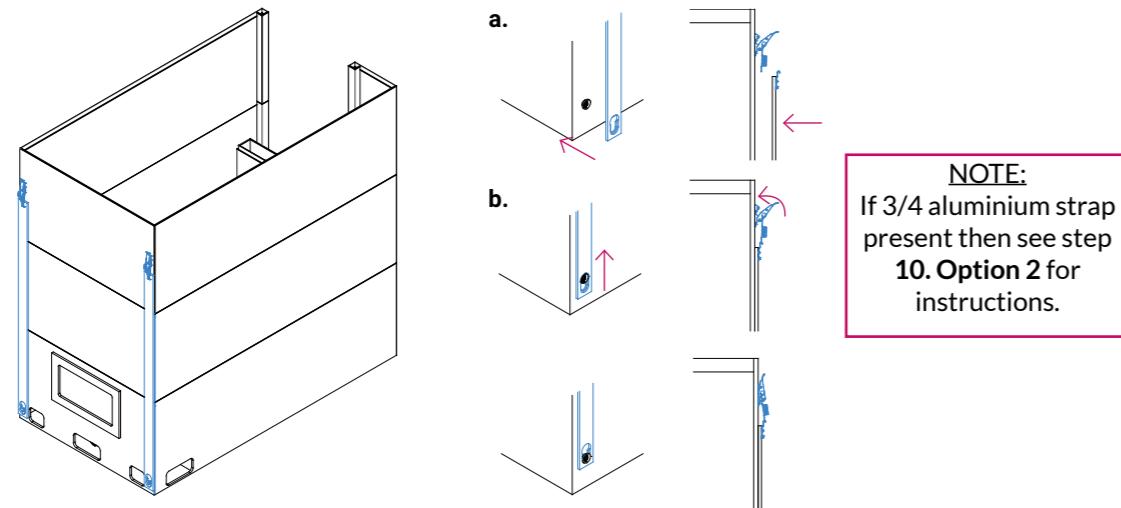


8. Fit side fascias and fix with screws and cover caps from envelope (also using previously removed screws). Note the screws on top fascia must also be used.

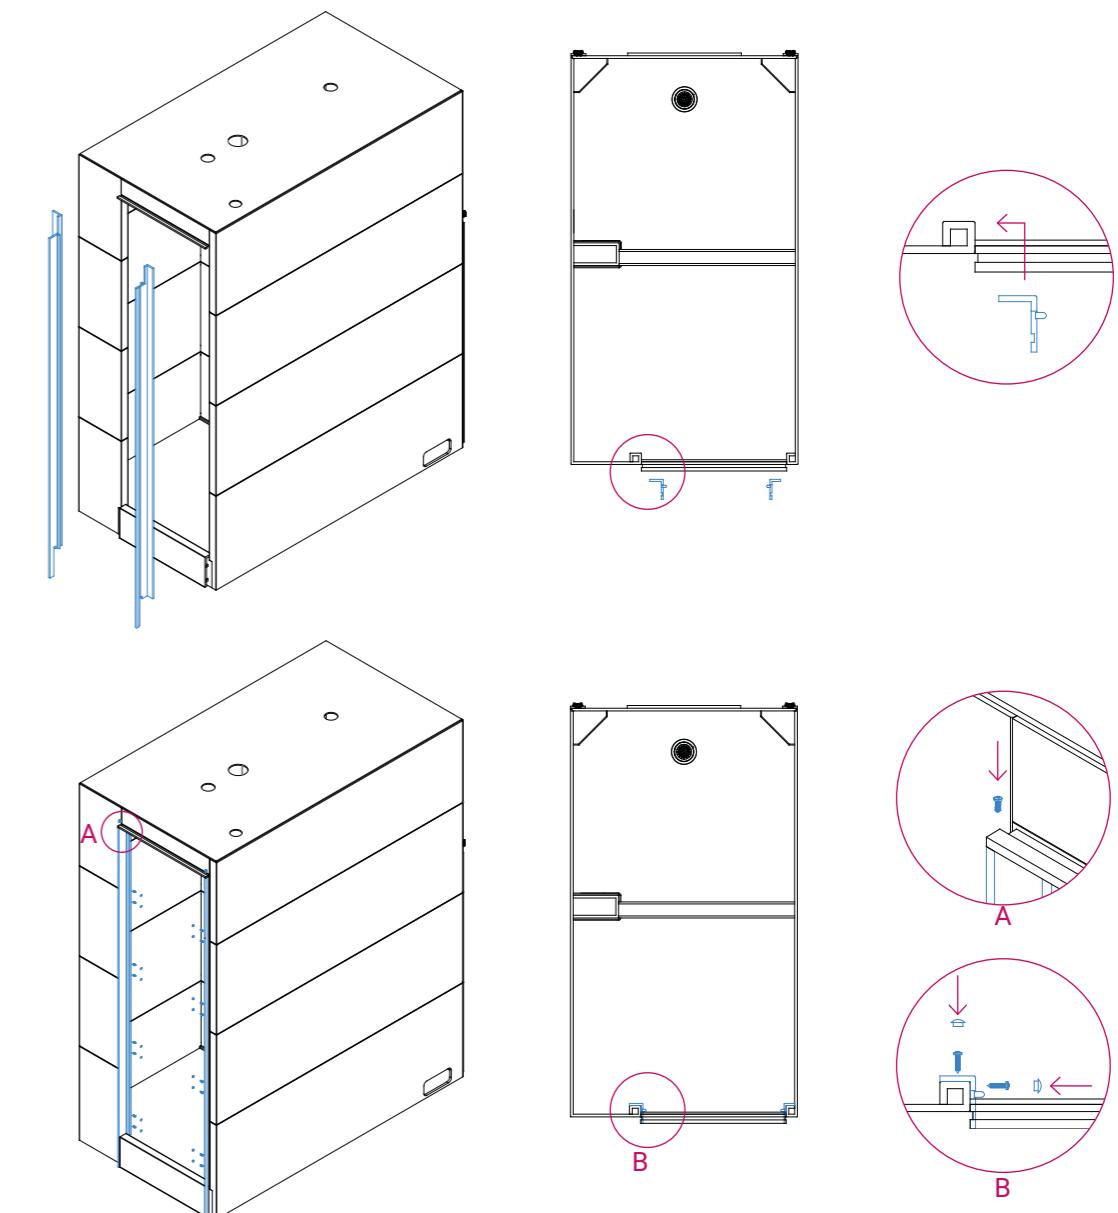

6. Slot in top section and secure with mallet.

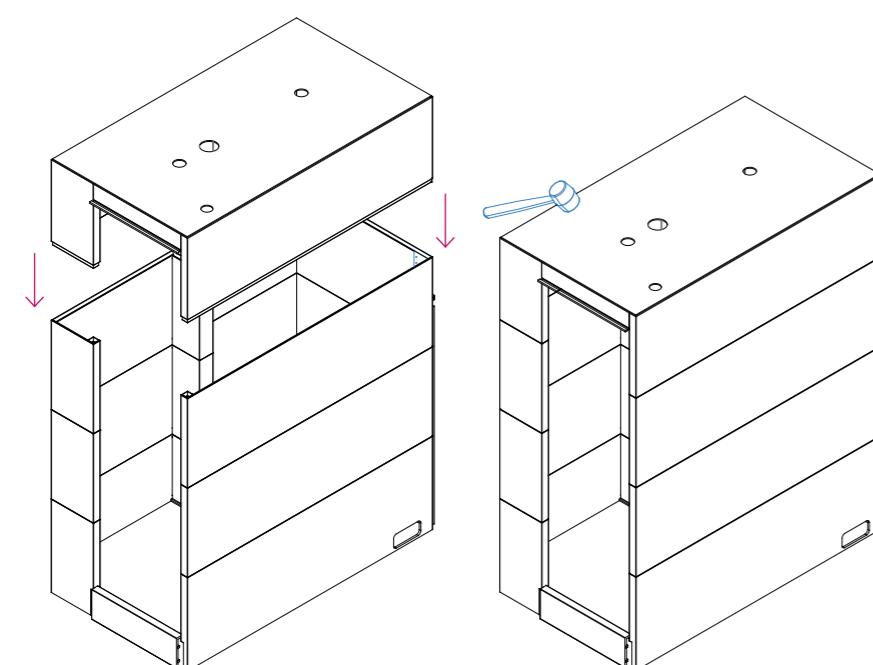


9. Plumb shower fitments. Refer to **Taplanes Mixer Console Installation Instructions** for detailed instructions.

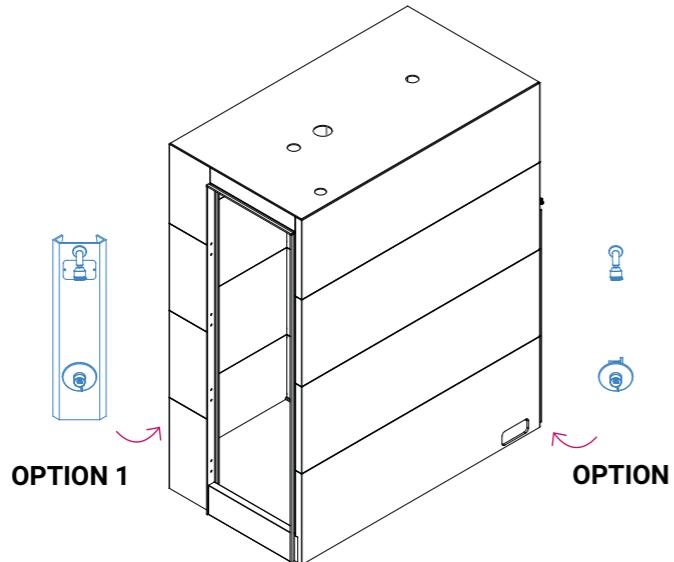


#### 10. Option 1: Curtain Catcher

Reuse previously removed screws and cover caps to fit the curtain catcher (if applicable).

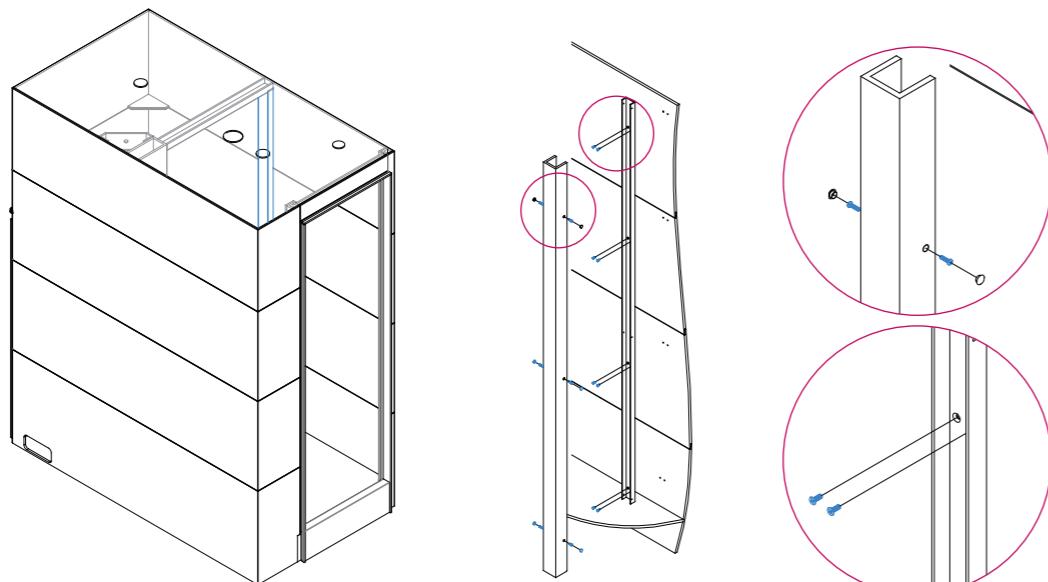


#### 10. Option 2: Full length aluminium straps

Attach full length aluminium straps (if applicable).

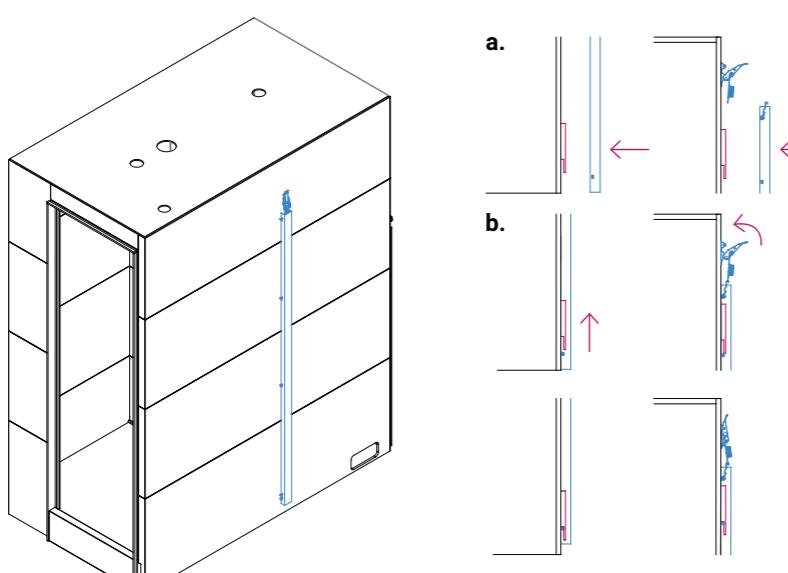


11. Refer to manufacturers' instructions to fit lights, extractors and PIR Sensors.

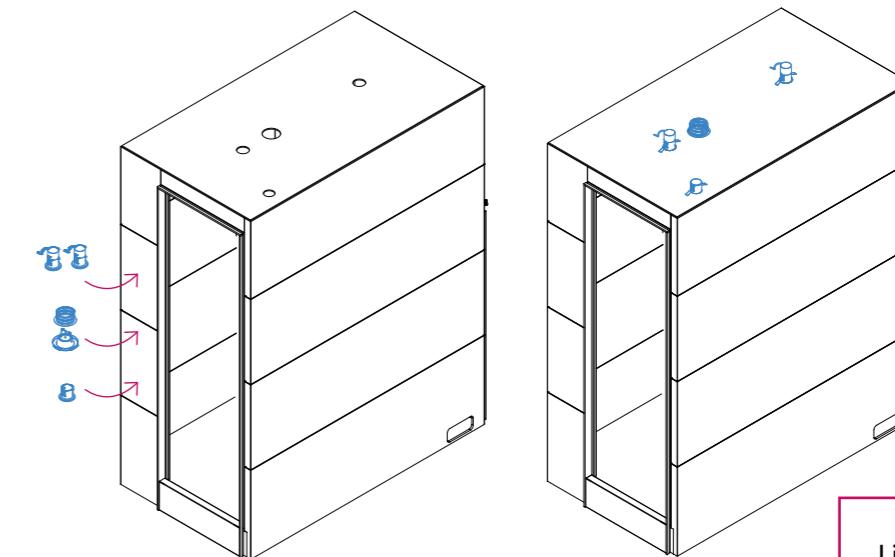


#### WARNING!

Lights, extractors and PIR sensors to be installed by a certified electrician.


#### 12. Use previously removed screws to fit door.

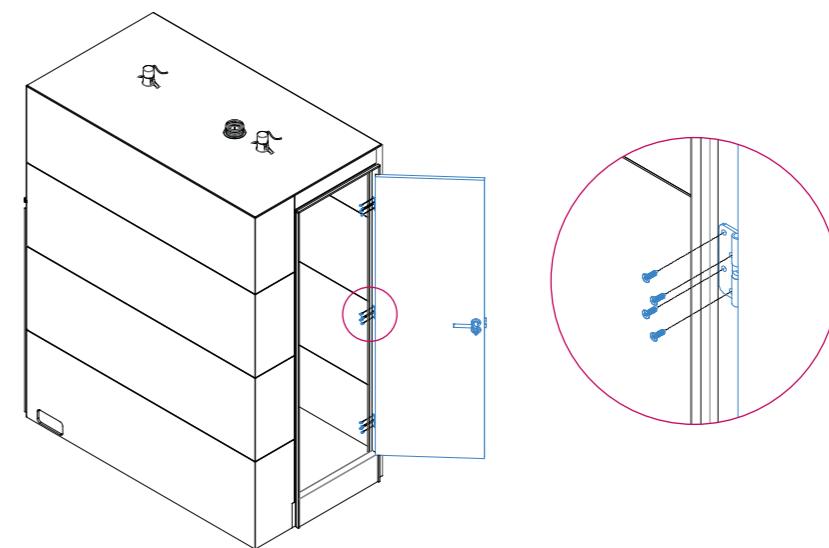

#### Removing access panel.

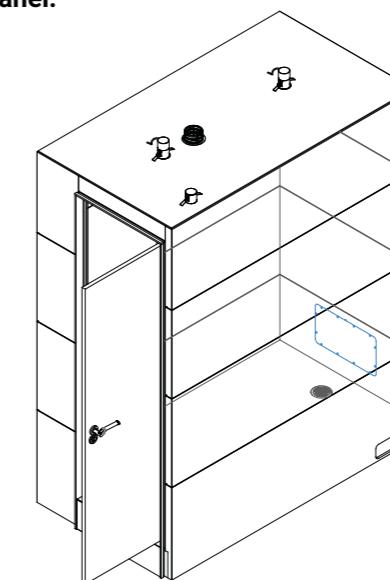

1. Remove cover caps and
2. Use screwdriver to loosen screws.

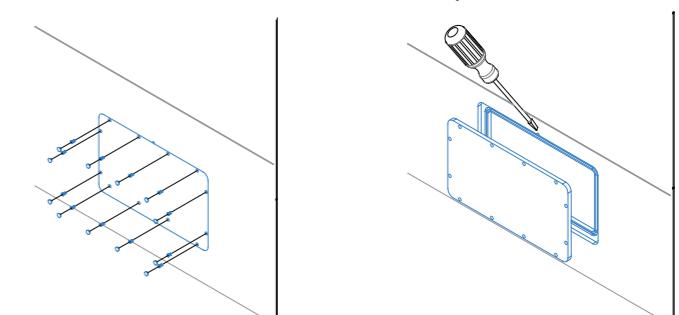


## Shower & Changing Pod Panelling Instructions

### Stud and Trench Fascias

#### 0mm Stud Type


Add panelling around fascias and ensure that the panelling meets the fascia trenches.

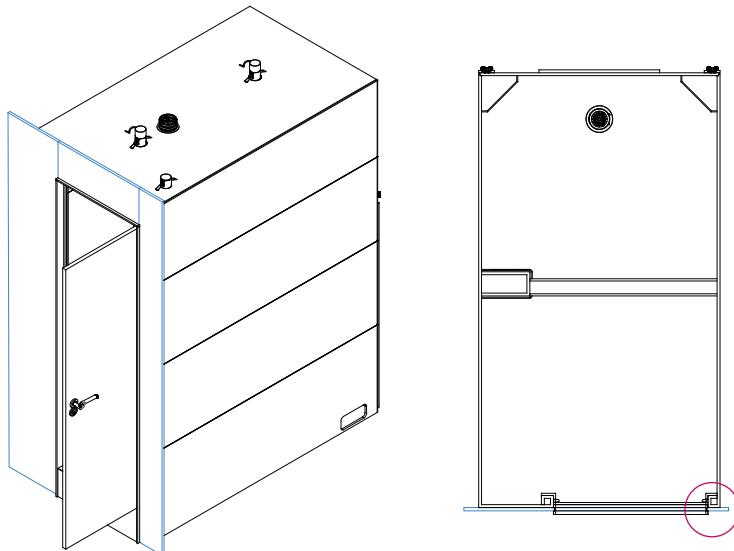

**WARNING!**  
Do not screw through joint sections.

#### 50mm Stud Type

Add studwork and panelling around fascias and ensure that the panelling meets the fascia trenches.

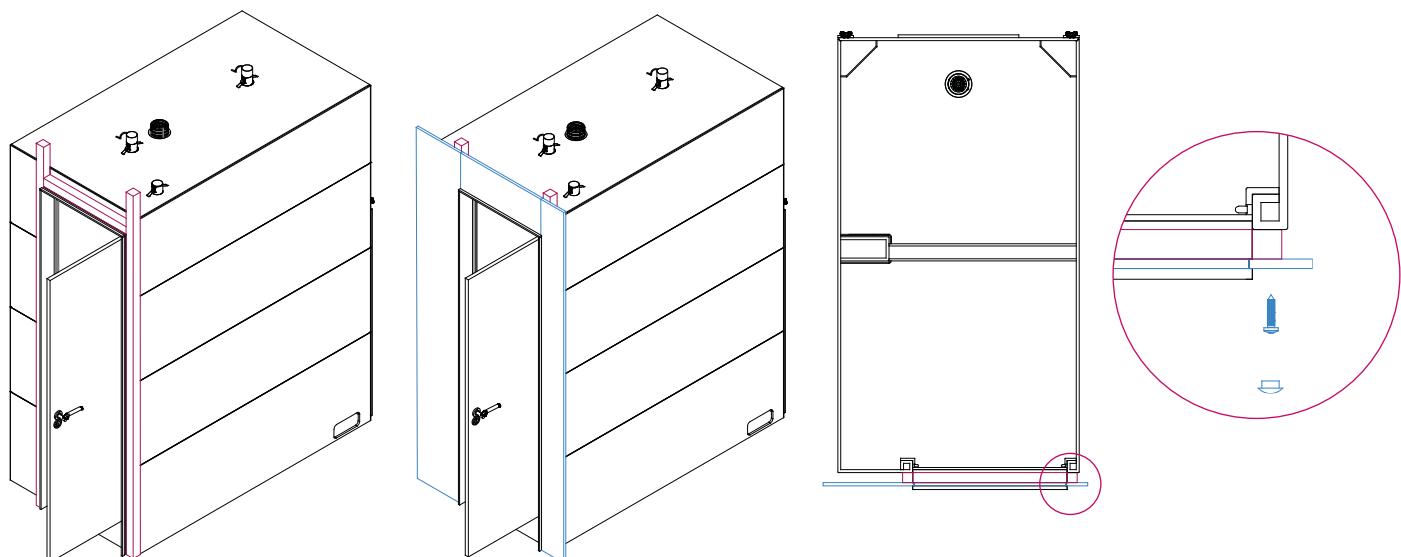

### TAPLANES LIMITED

Station Court  
Nidd  
Harrogate  
North Yorkshire  
HG3 3BG

### ENQUIRIES

01423 771 645  
[enquiries@taplanes.co.uk](mailto:enquiries@taplanes.co.uk)  
[www.taplanes.co.uk](http://www.taplanes.co.uk)