



## Wheelchair Accessible Shower Pod

# TAPLANES INSTALLATION INSTRUCTIONS TO BE USED AS A PRIMARY GUIDE.

CONSULT ALL OTHER MANUFACTURERS' GUIDES  
AFTER READING AND UNDERSTANDING TAPLANES  
REQUIREMENTS.

**TAPLANES LIMITED**  
Station Court  
Nidd  
Harrogate  
North Yorkshire  
HG3 3BG

**ENQUIRIES**  
01423 771 645  
enquiries@taplanes.co.uk  
[www.taplanes.co.uk](http://www.taplanes.co.uk)


**Wheelchair Accessible Shower Pod as Delivered to Site**


- Disassembled W.A.S.P. Pod
- Washbasin
- WC Pan with cistern
- Mirror
- Internal Shower Curtain Rail
- Grab Rails
- Shower Seat
- Shower valve, fittings and other plumbing materials
- Extraction
- Electrical appliances (LED Lights, Alarms)
- Pipe box and blanking plate

All components are to be fitted on site by installers.

**HANDLING GUIDELINES:**

- Units are heavy. Base section should be handled by 6-8 people; middle sections should be handled by 2 people; top sections should be handled by 4 people.
- Extra caution to be taken to protect tongue and groove.

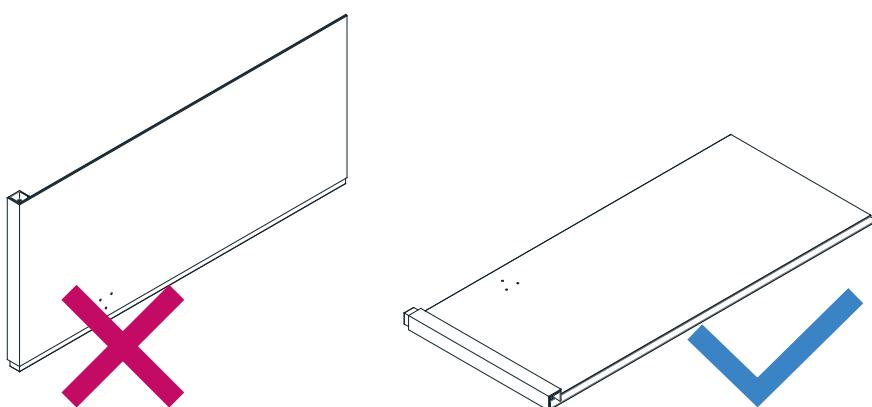

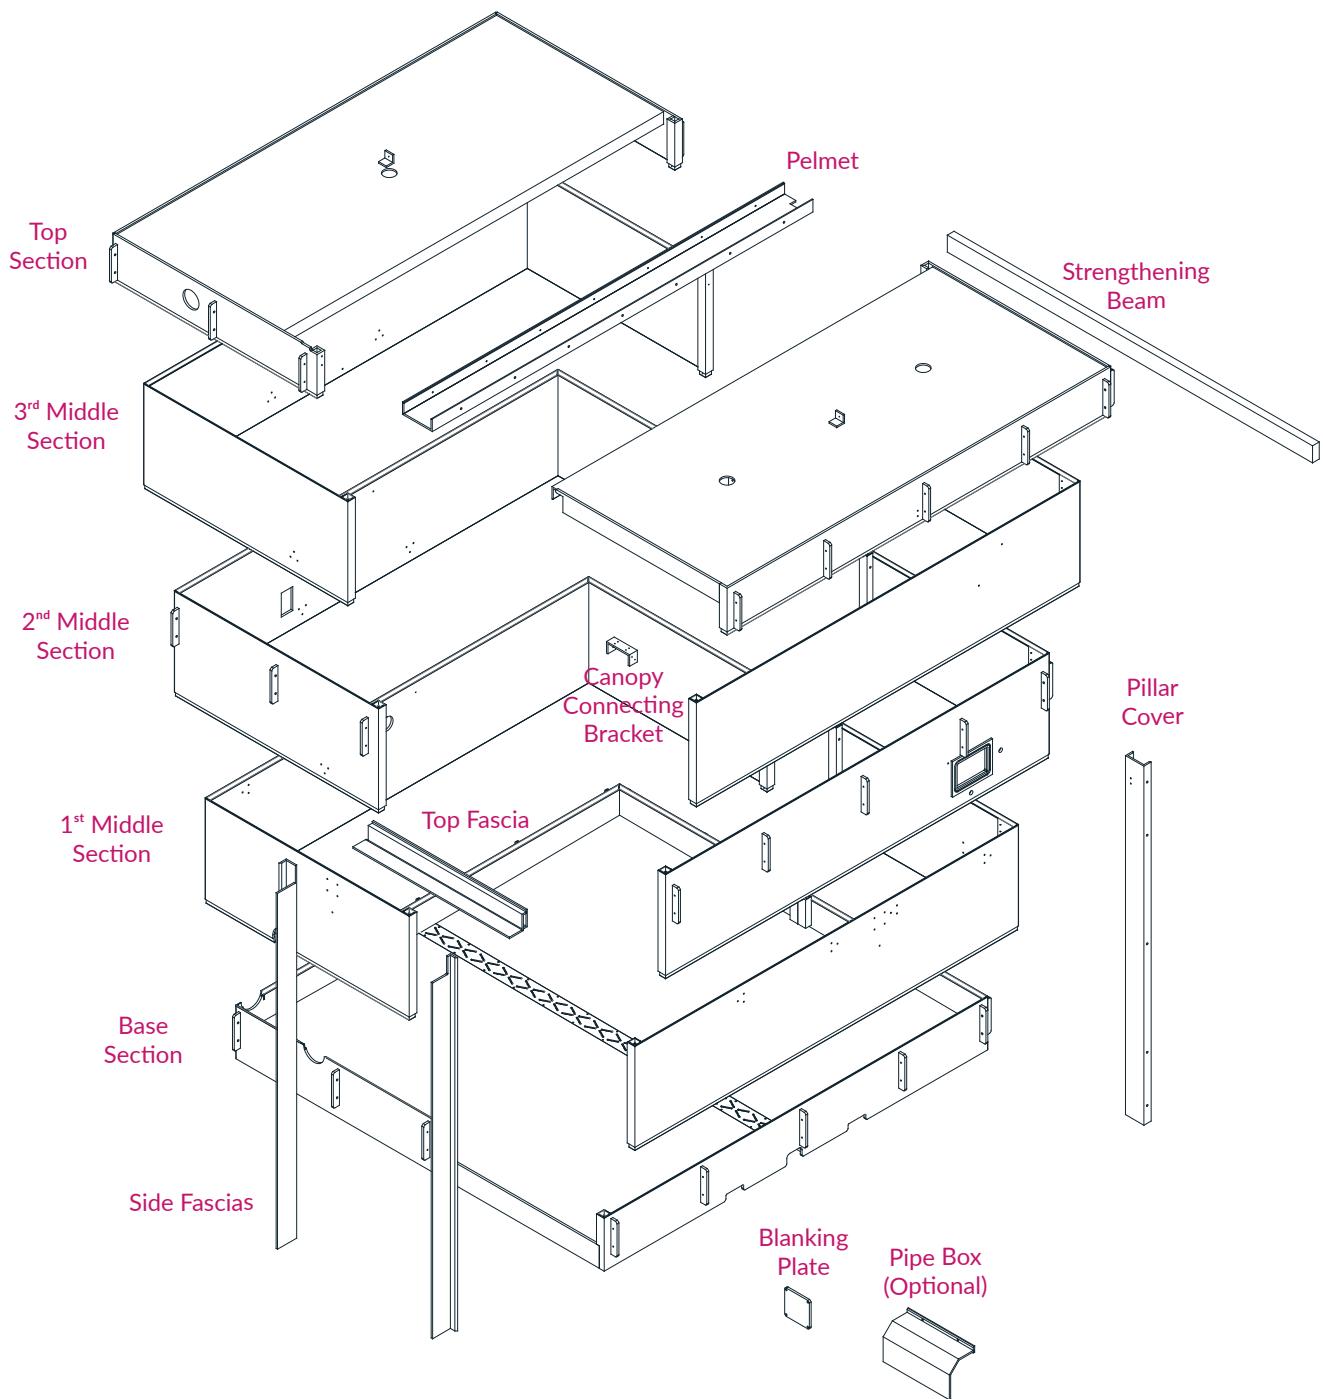


**NOTE:**


- Spare screws and cover caps are provided in an envelope.
- Take care not to lose any removed screws.
- Do not mix sections from different units.

**Wheelchair Accessible Shower Pod Installation Instructions**


**1.** Plumb base section and check for leaks.

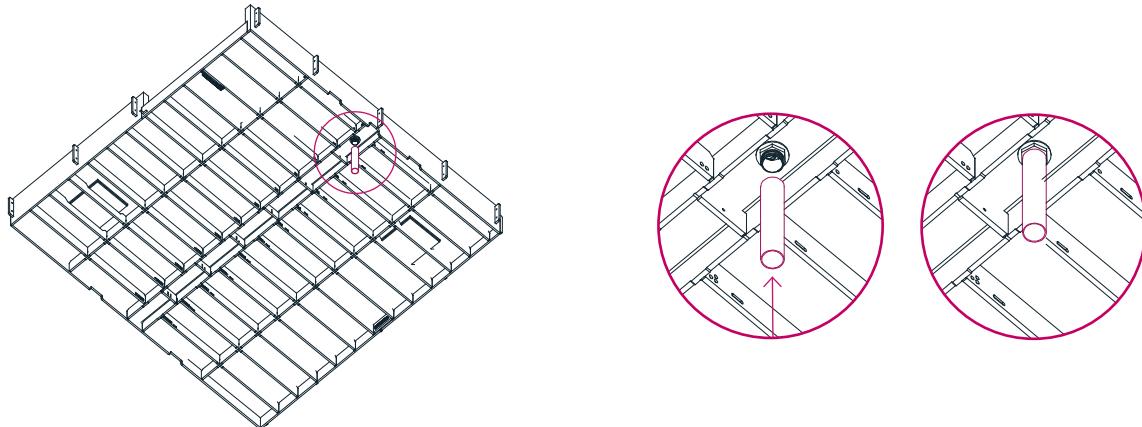



**2.** Position the base and check level (usually achieved with levelling compound or packers).

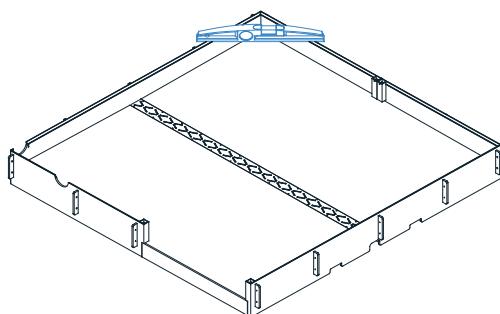

**3.** Slot in the 1" left and right middle sections and secure with tapping tool and mallet.

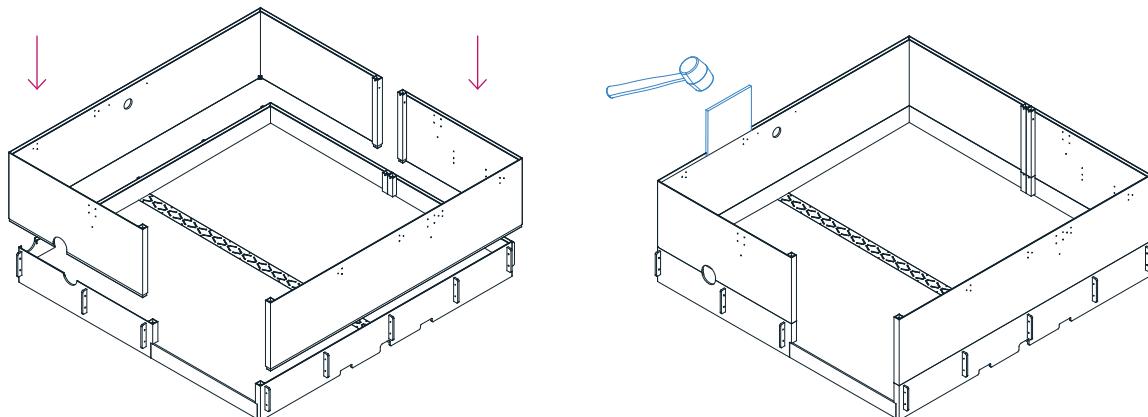



**4.** Use screws to join the back pillar sections from the side.

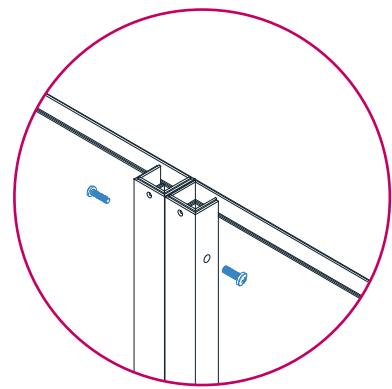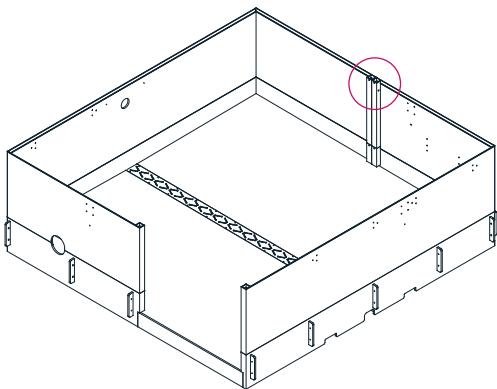

**5.** Decide and prepare for pipework positioning.

**Option 1: Waste from front**



Use blanking plate and screws to cover unused cut out.

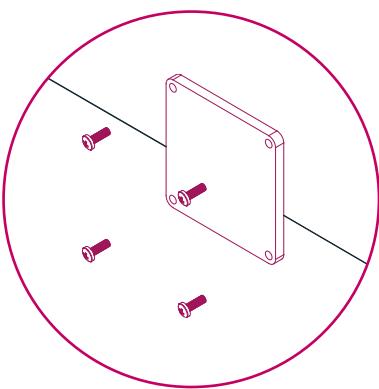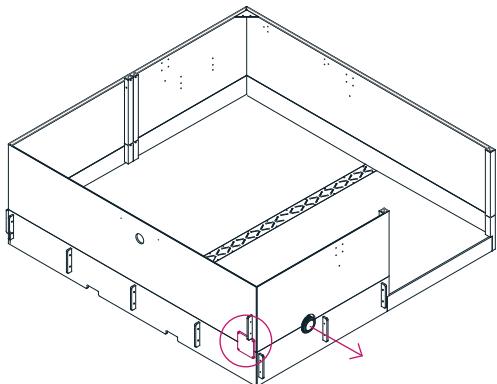



**Option 2: Waste from side**

Use screws to fix pipe box cover.


Use blanking plate and screws to cover unused cut out.

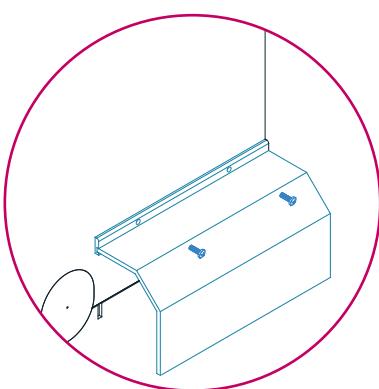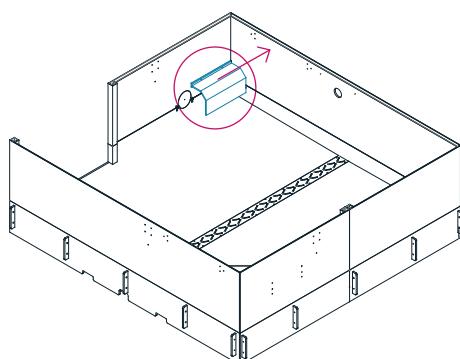




**6.** Refer to manufacturers' installation instructions to plumb WC.

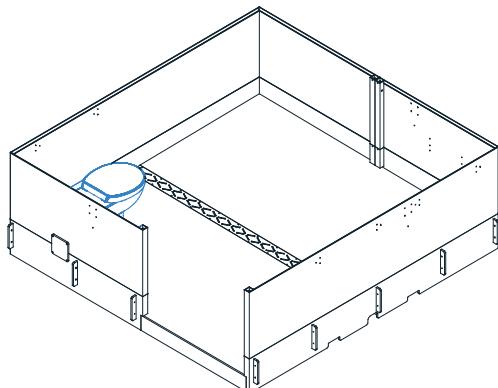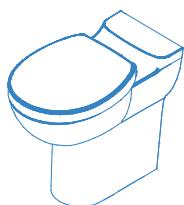


**7.** Slot in the 2<sup>nd</sup> middle sections and secure with tapping tool and mallet.

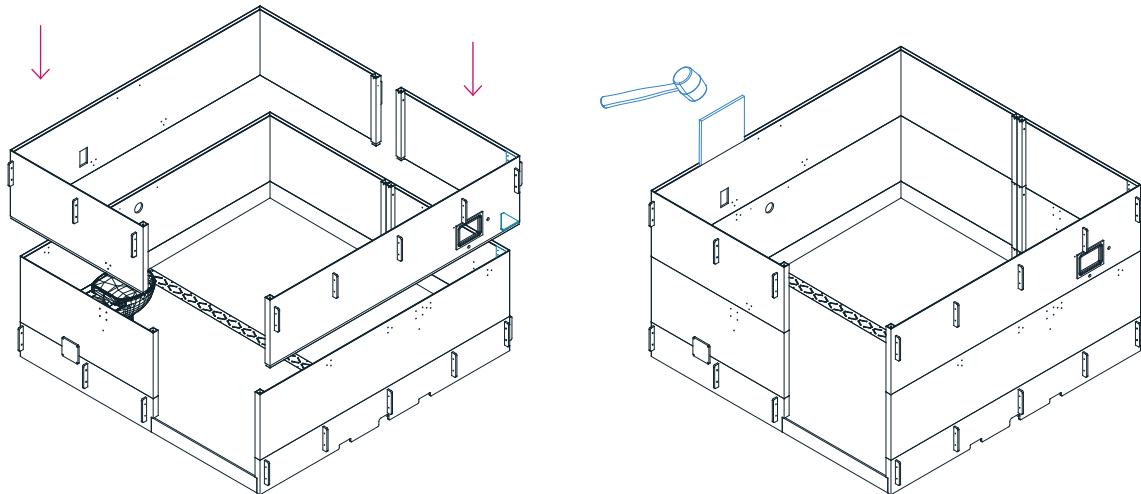


**8.** Secure sections together. Join soap dishes with screws and fit cover caps (a.); use screws to fix back pillars form front and side (b.). Repeat the process with next section.

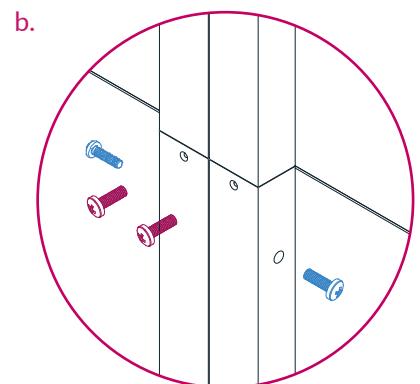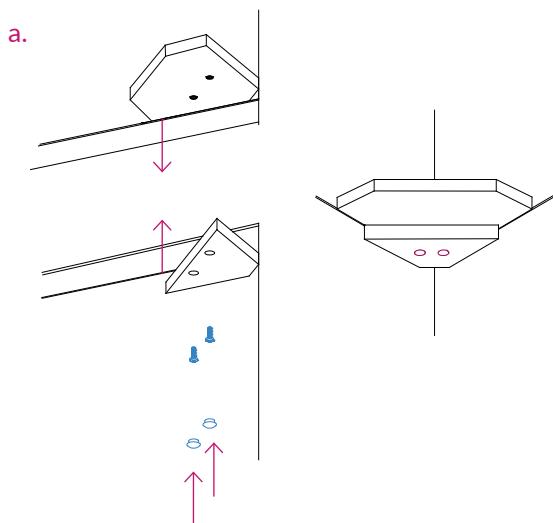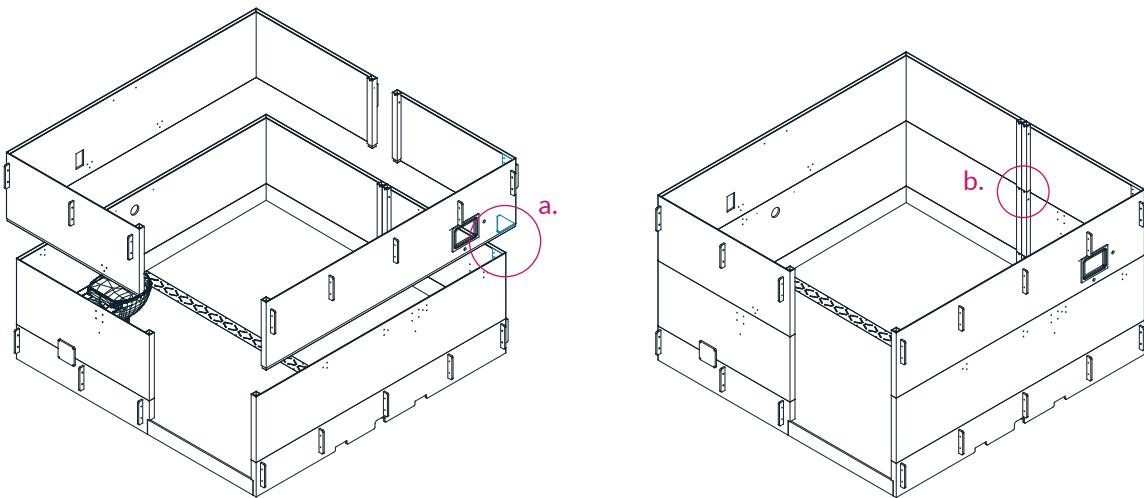


**9.** Slot in the dry area canopy (above WC) and secure with mallet.

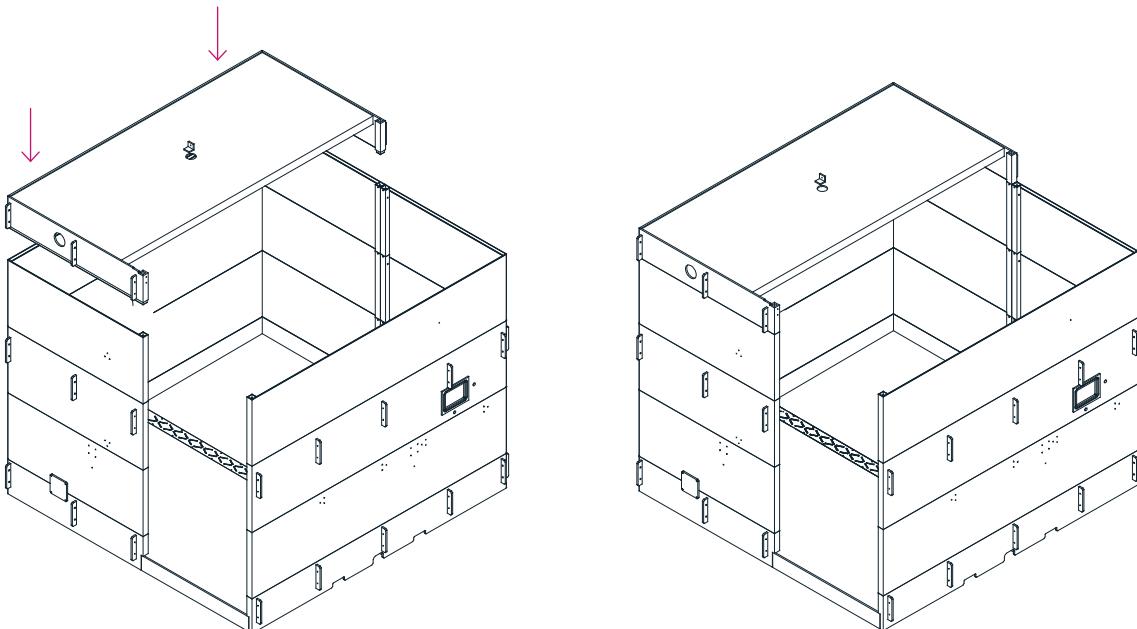



**10.** Slot in wet area canopy (above doorway) and secure with mallet.

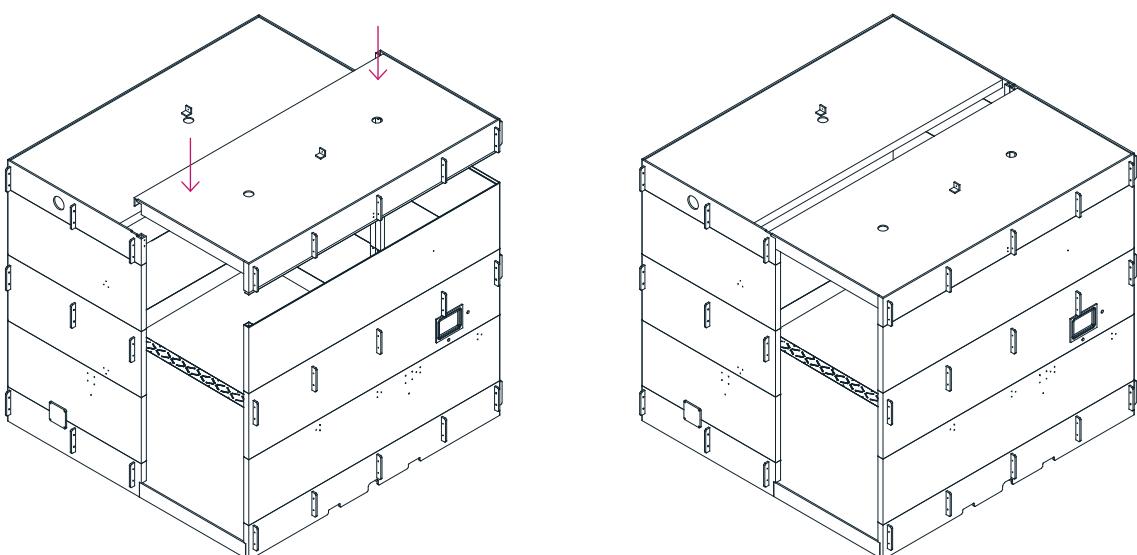



Use screws to join back pillars together from the front and side.

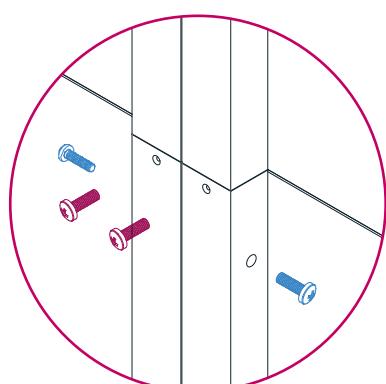



**11.** Use screws to join top sections.

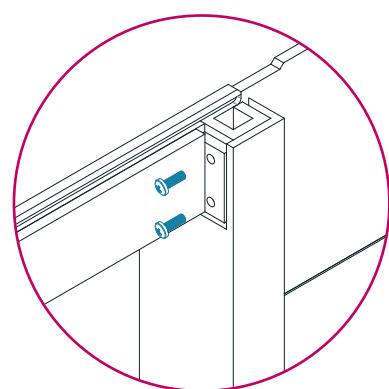
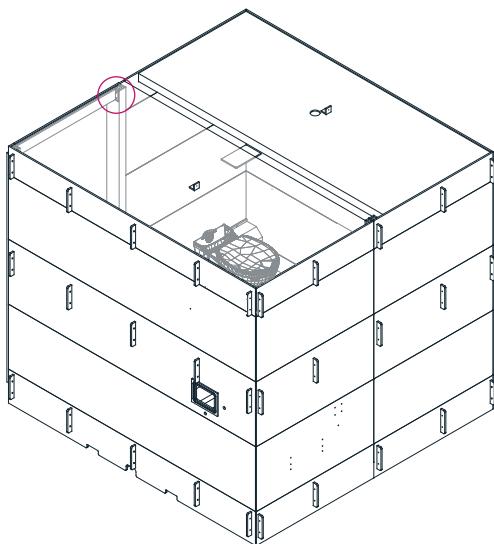


**12.** Secure beam across canopy using the pre fitted 'L' brackets.


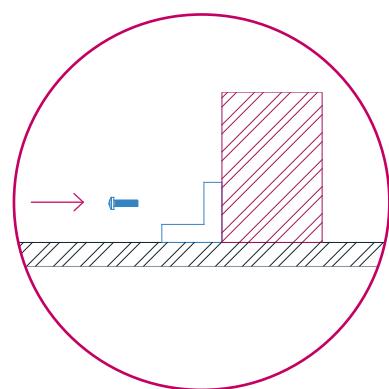
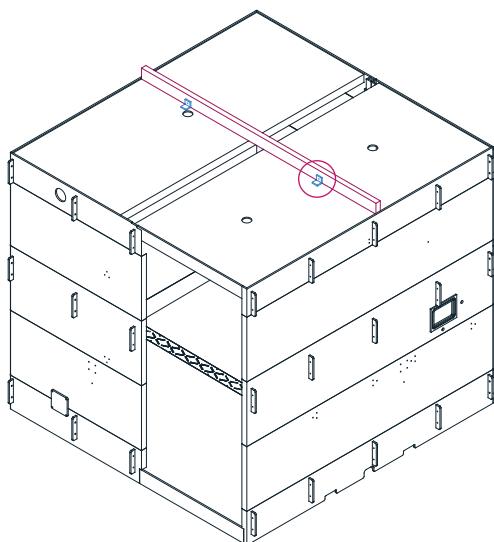


**13.** Align the canopy connecting bracket with the timber beam. Using screws, fix the sides of the bracket into the two parts of the canopy (a.); then the top into the beam (b.).

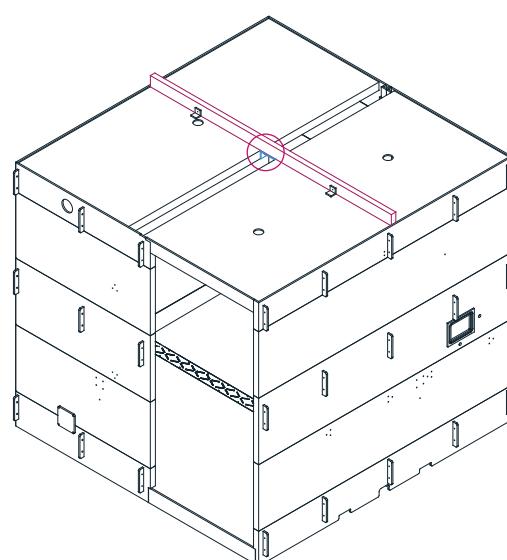
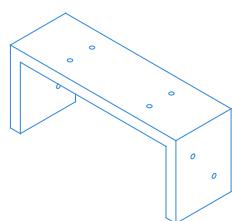


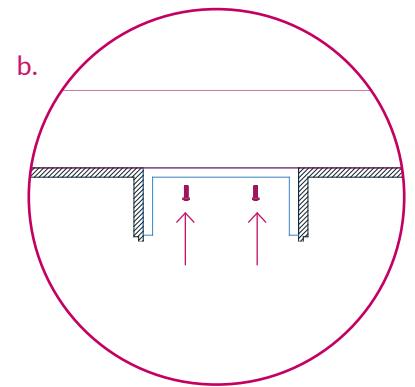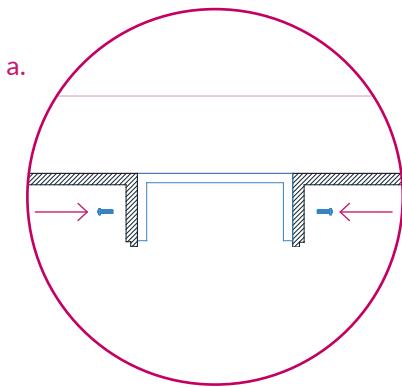


**14.** Slide pelmet into place and secure using screws and cover caps.

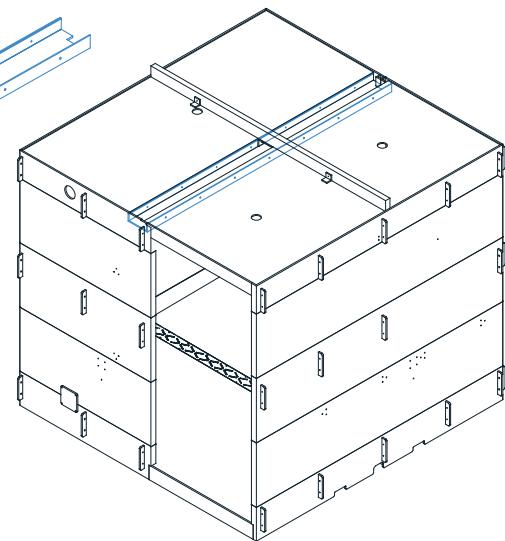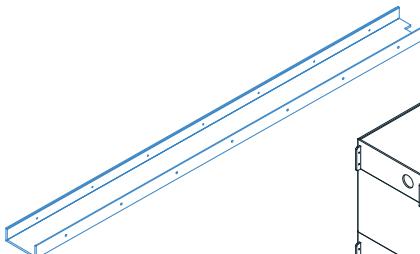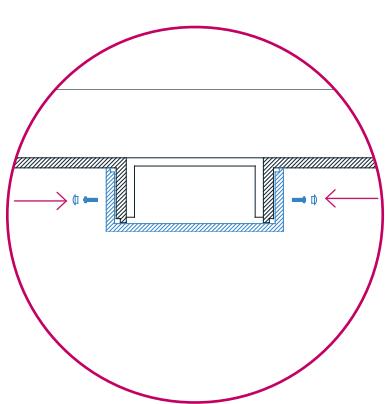


**15.** Use screws and cover caps to fix the pillar cover piece.

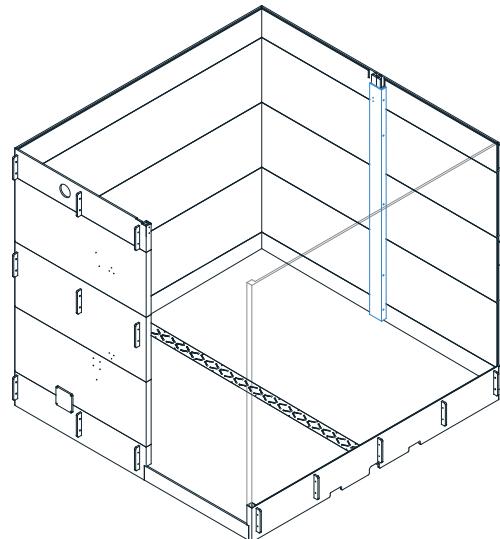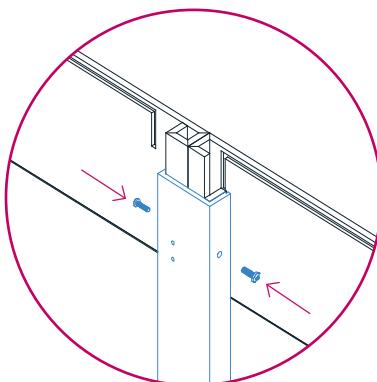


**16.** Position the top and side fascias around the door frame.

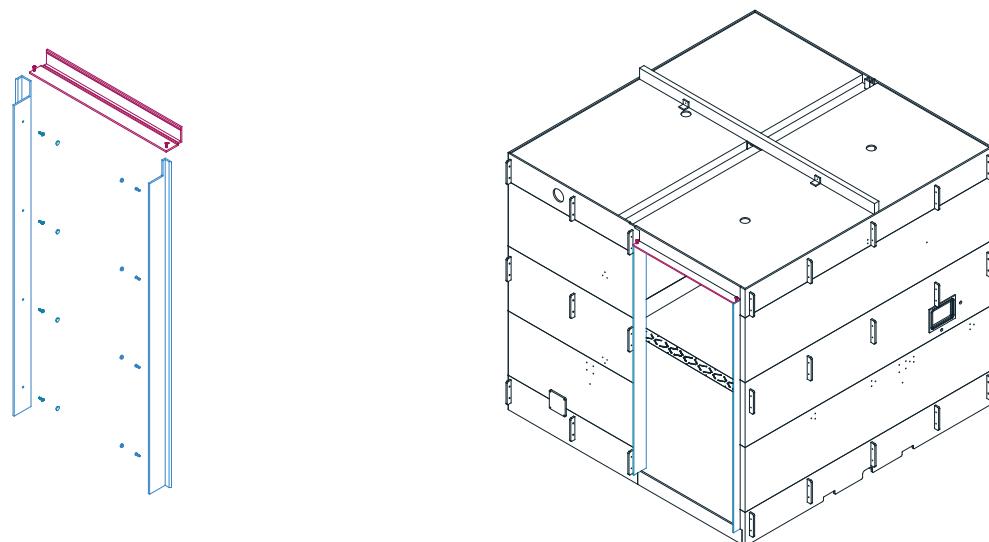


Secure side fascias using screws and cover caps.

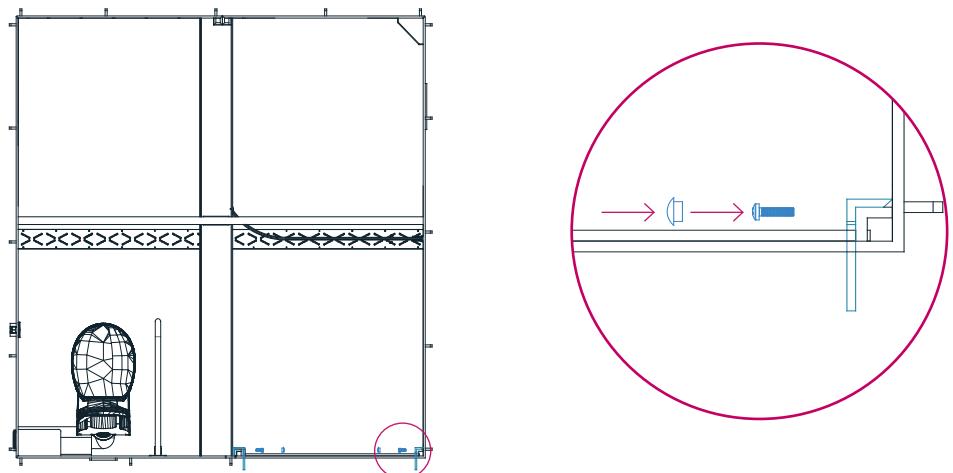


Secure top fascia using screws.

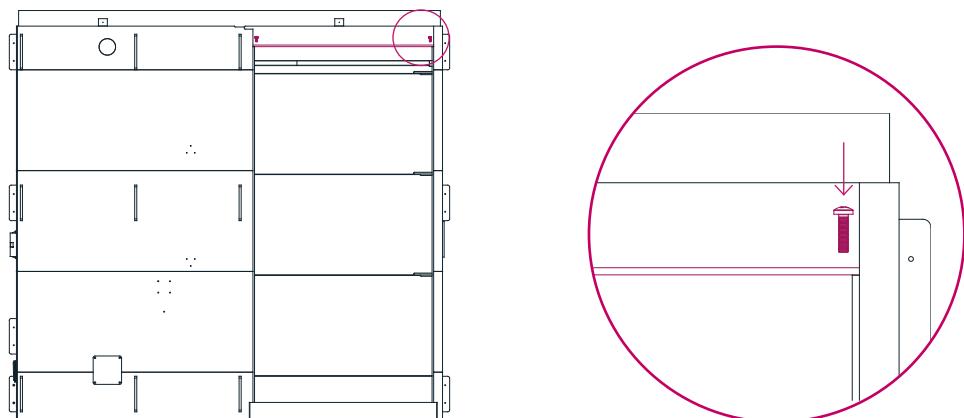

**17.** Fix studwork (See section on assembling stud work on page 12).

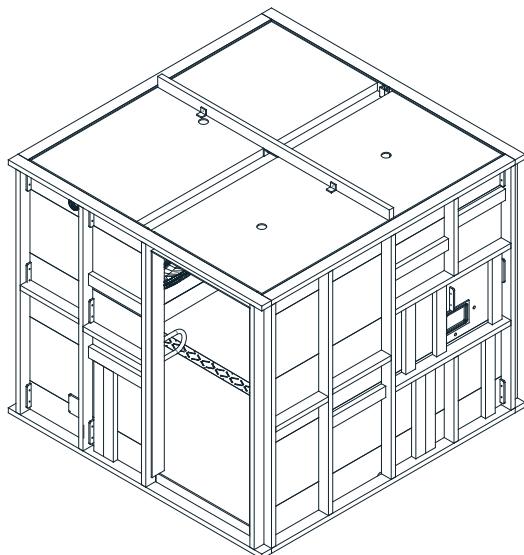

**18.** Refer to manufacturers' instructions to fit parts.

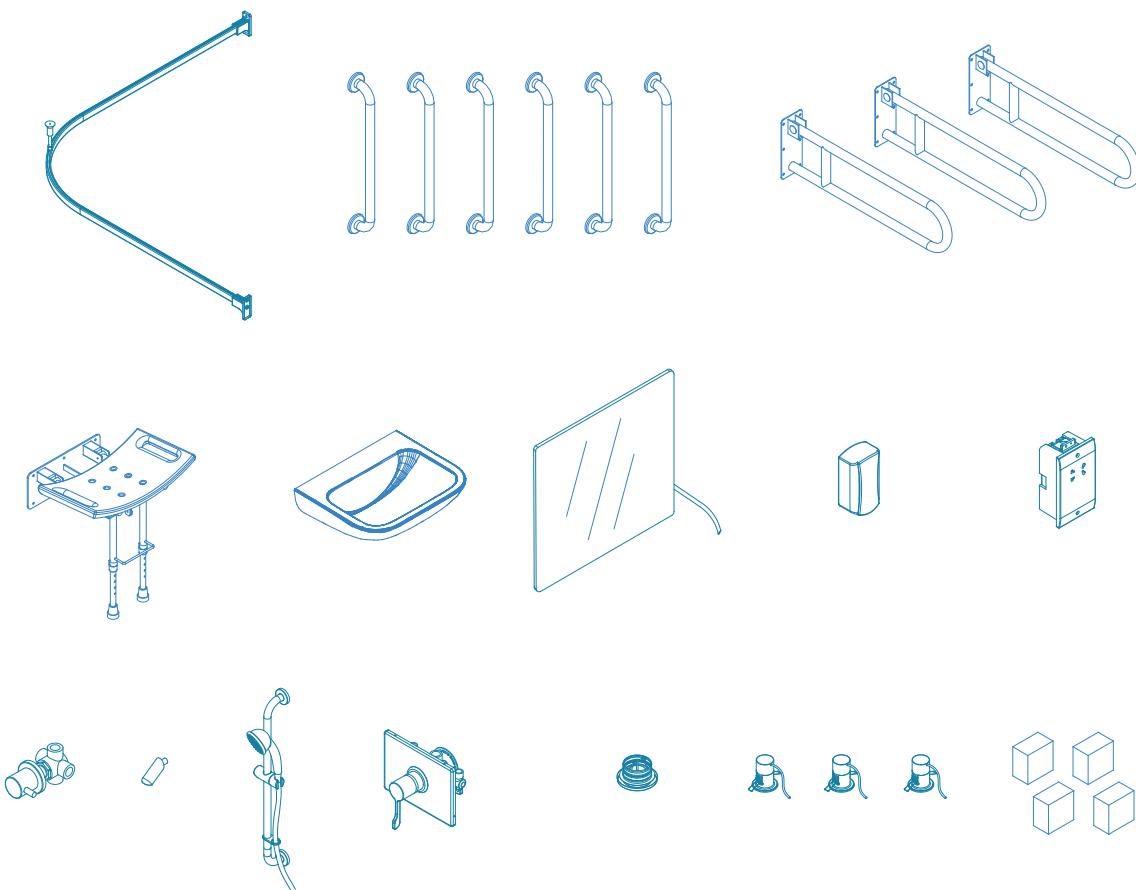

**WARNING!**



Lights, extractors, alarms and shaving sockets to be installed by certified electricians.

## Stud-Work Positioning



Timber used: 94x44mm (3"x2")



Please note the dimensions below are approximate.

### Front

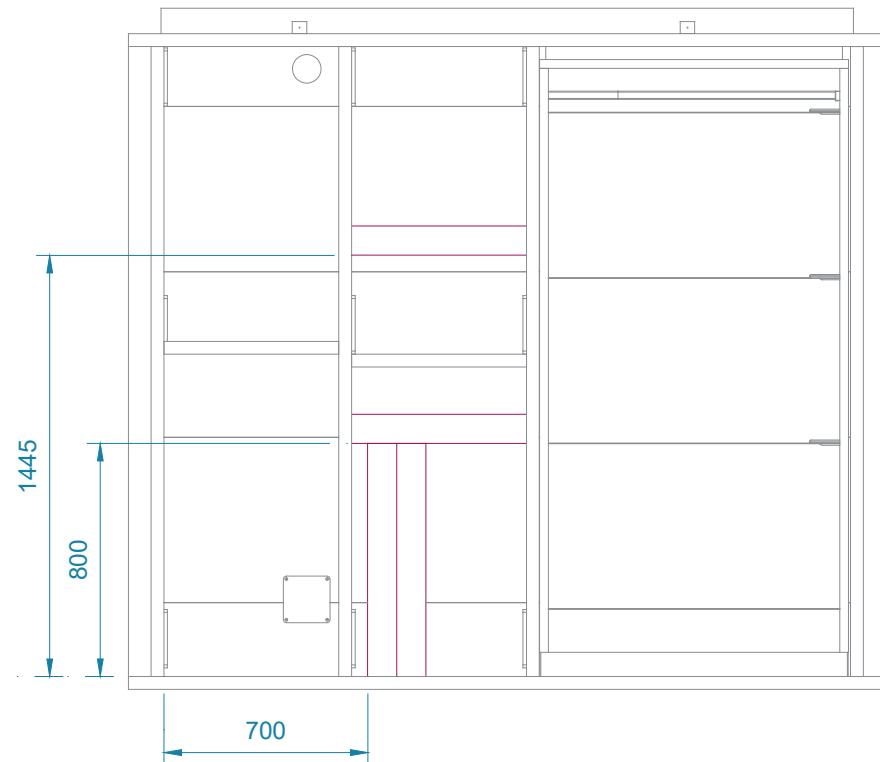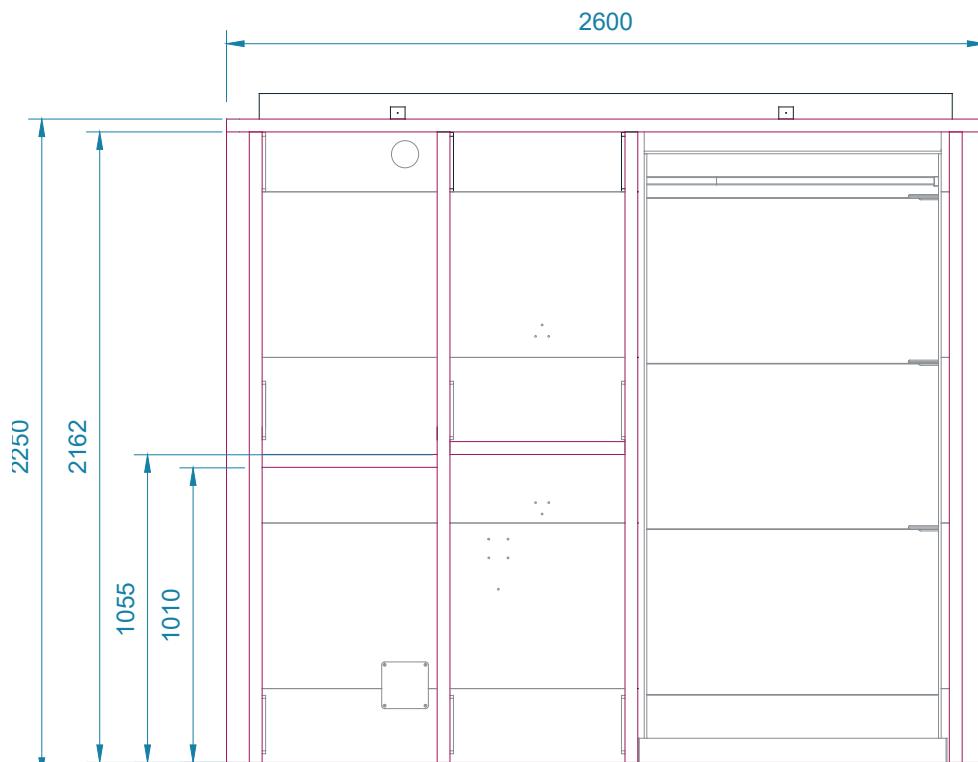


## Washbasin Side

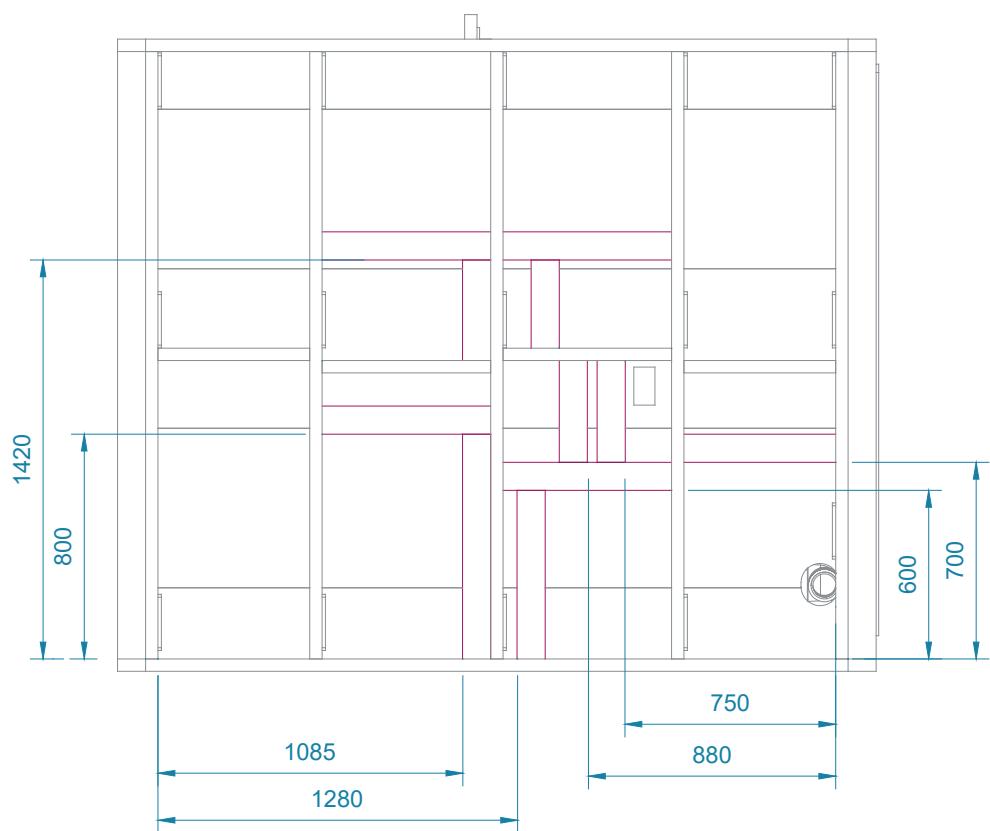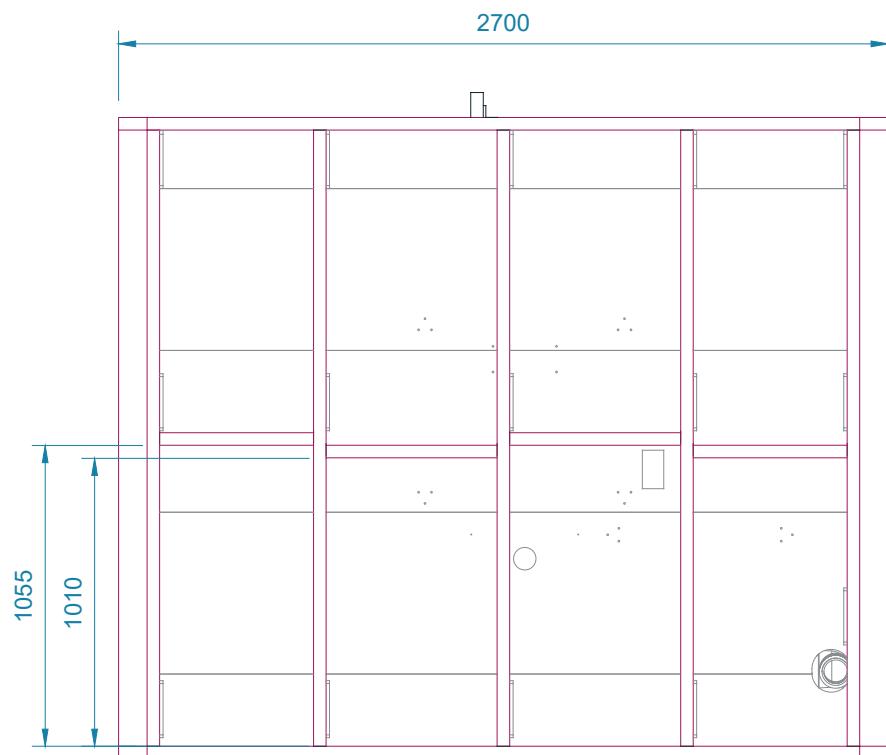

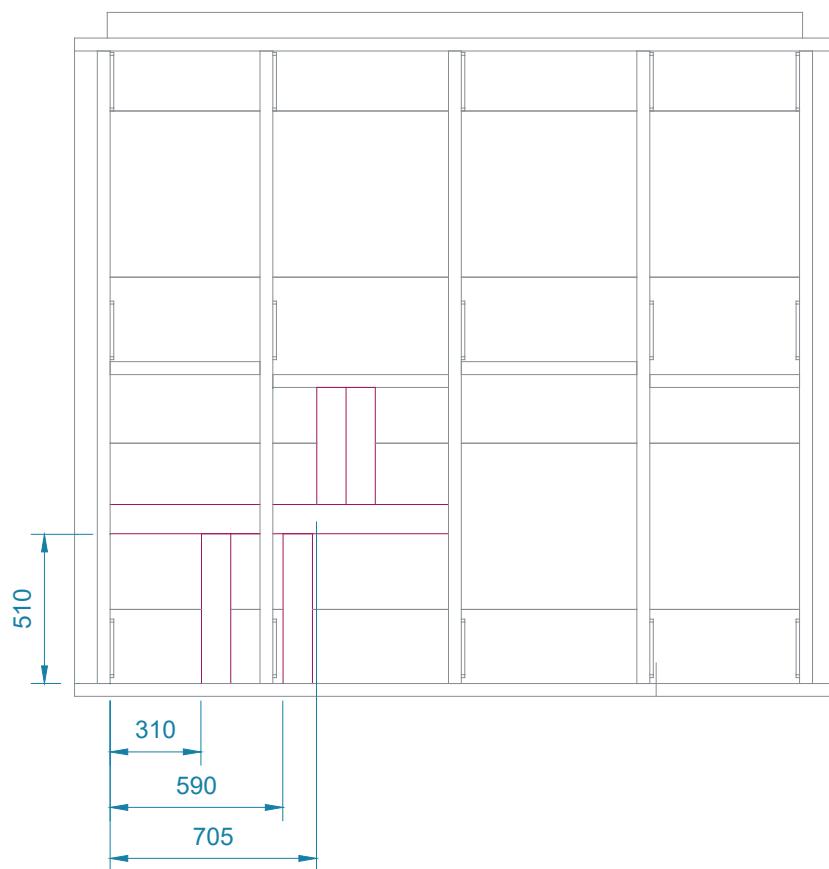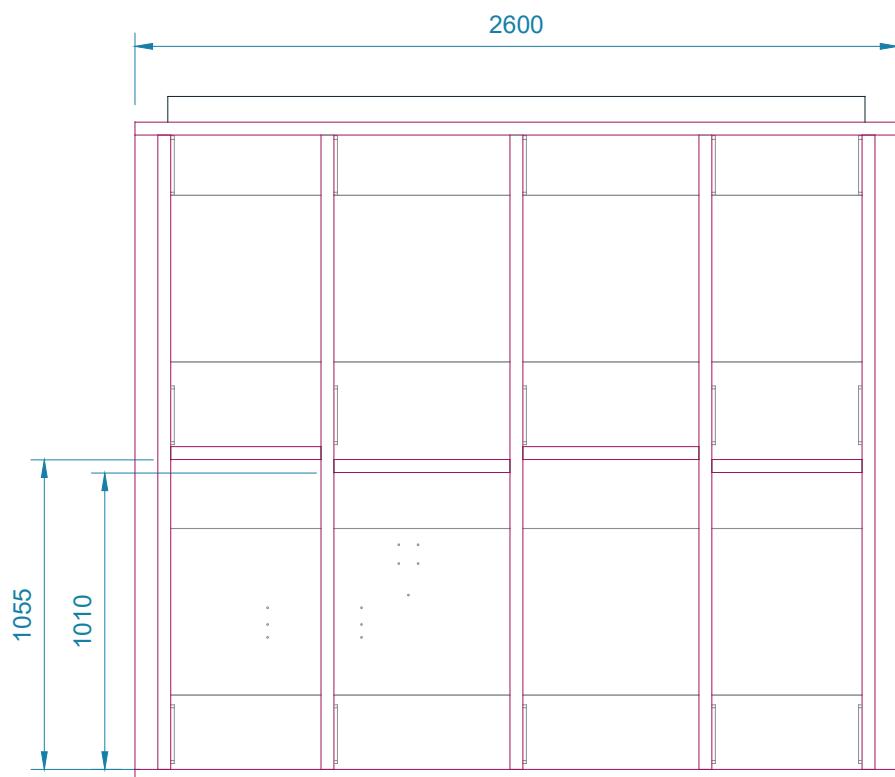**Back**

## Shower side

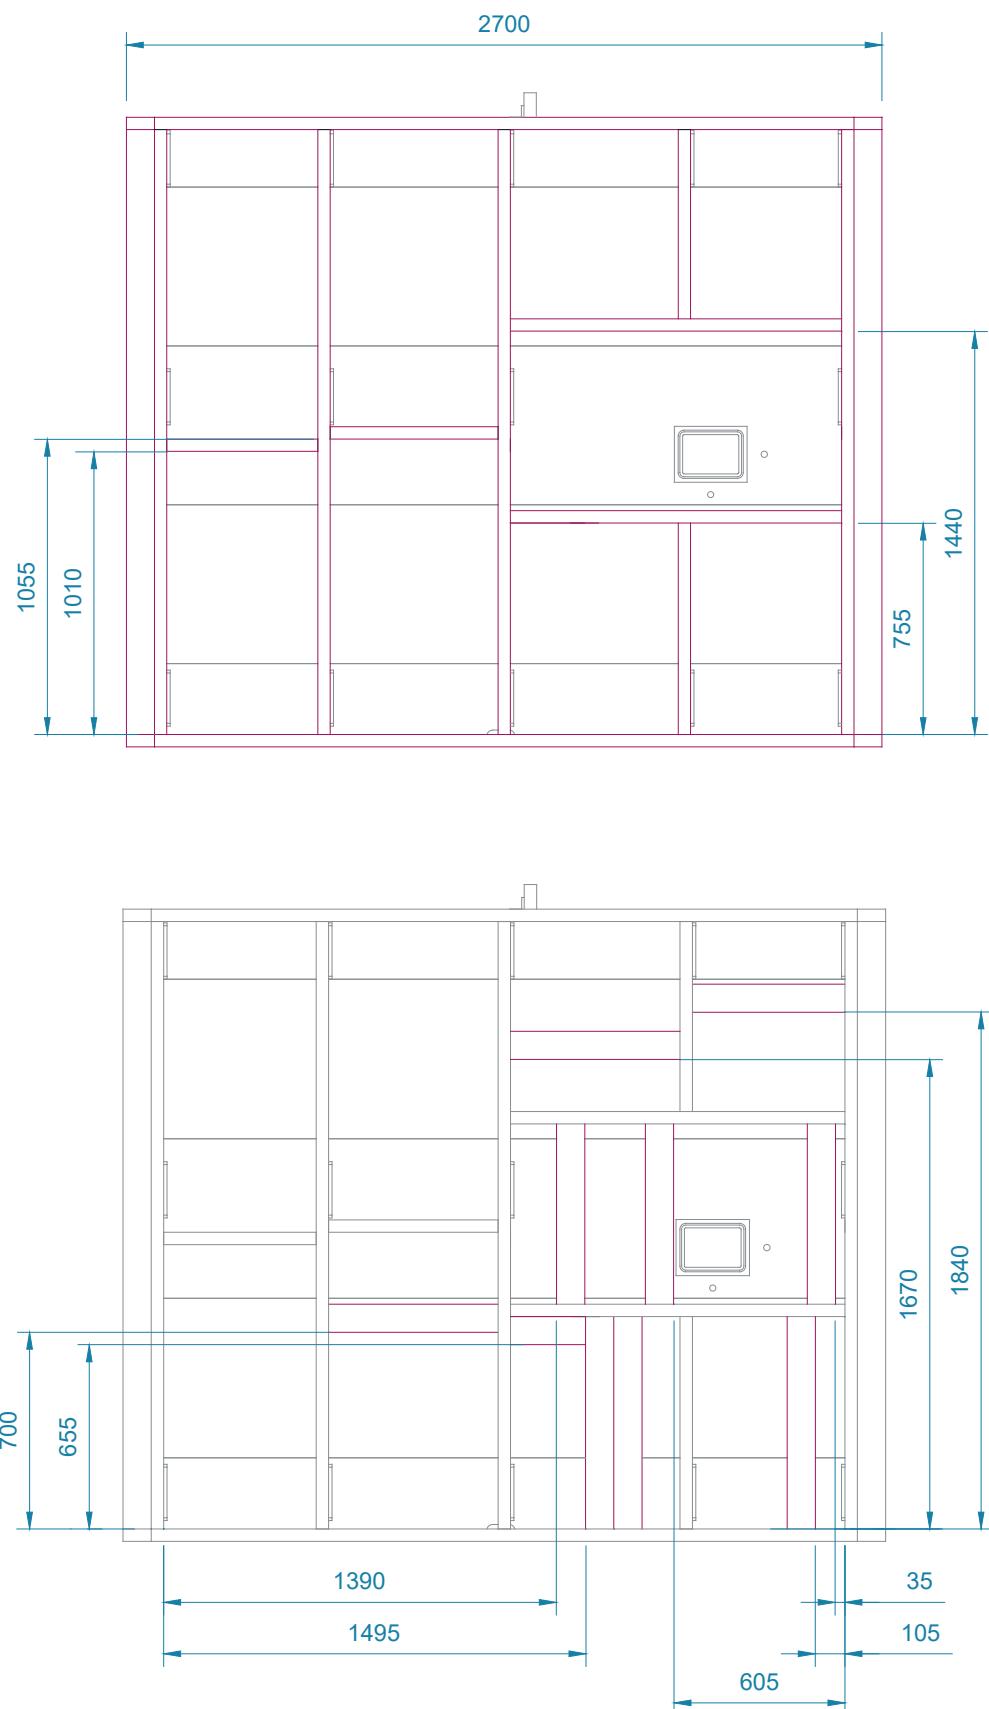

**TAPLANES LIMITED**  
Station Court  
Nidd  
Harrogate  
North Yorkshire  
HG3 3BG

**ENQUIRIES**  
01423 771 645  
[enquiries@taplanes.co.uk](mailto:enquiries@taplanes.co.uk)  
[www.taplanes.co.uk](http://www.taplanes.co.uk)